 



HOME SOURCE®

ASSEMBLY INSTRUCTION


MODEL:TV12700/TV4317 BLOND OAK

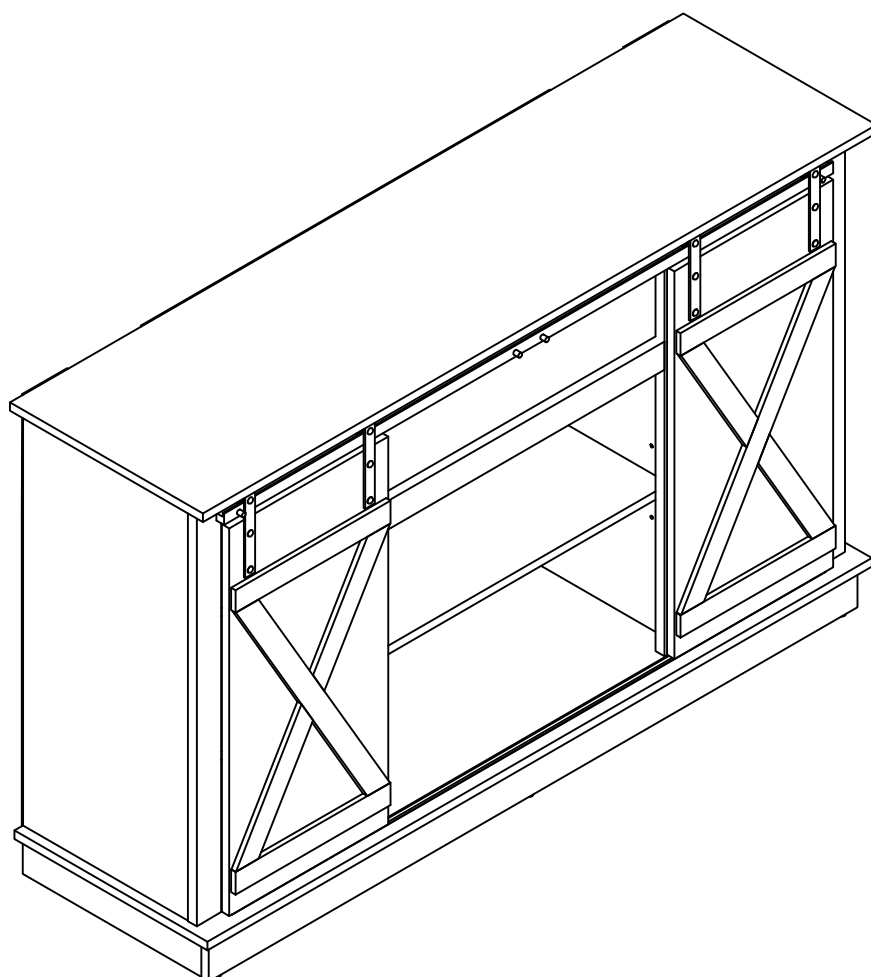

 
Parts List

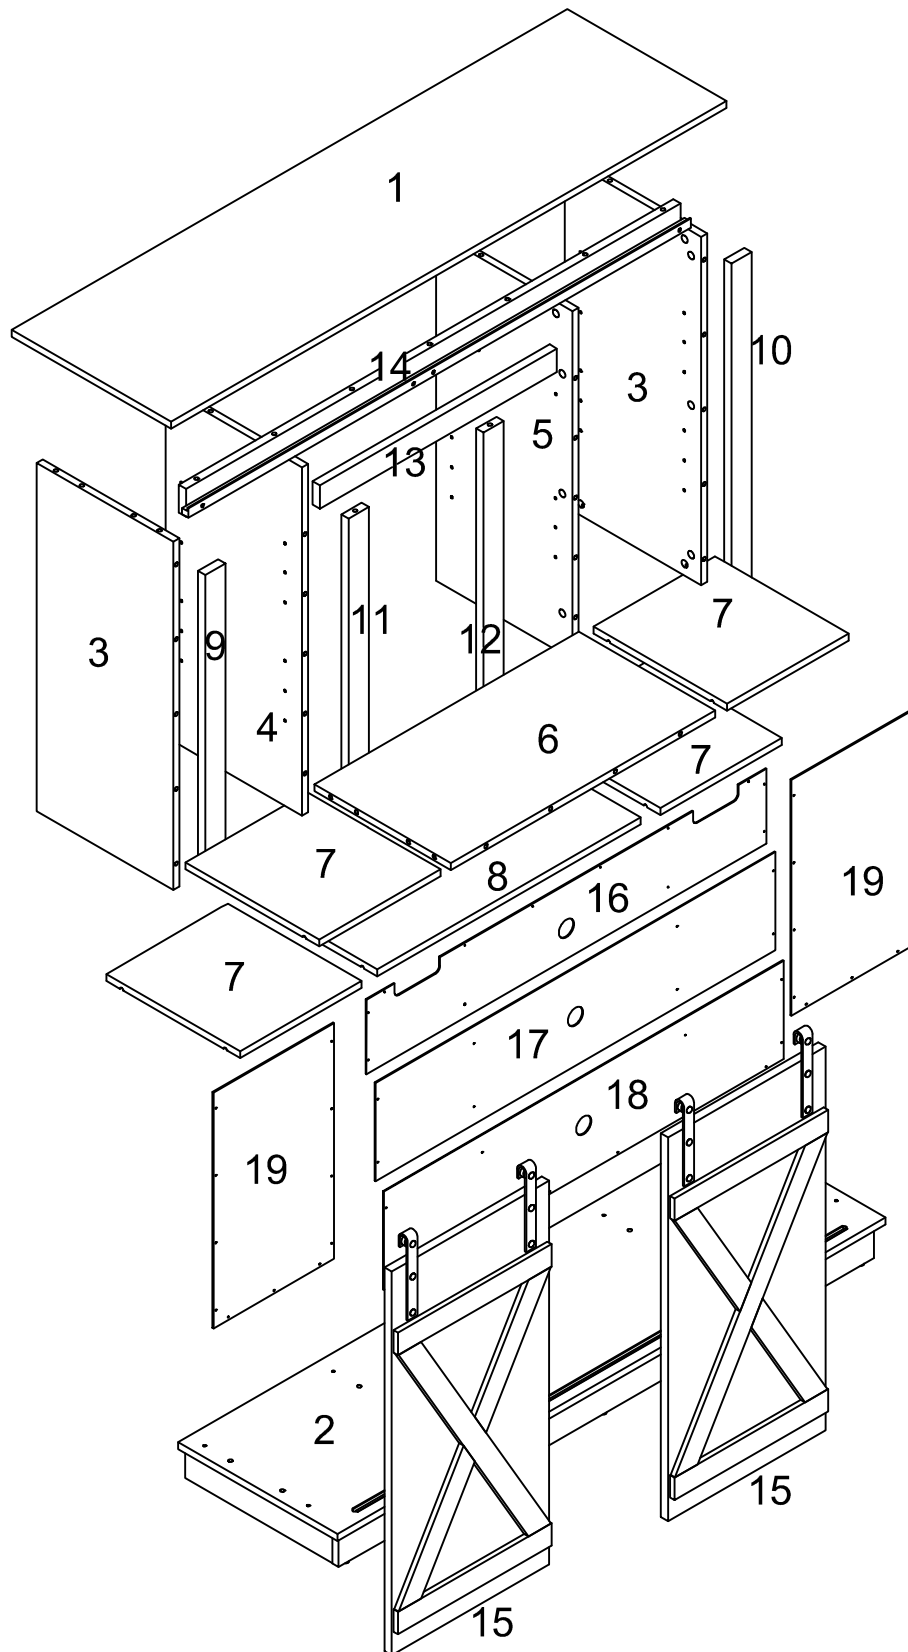


Hardware List

 A		Ø8x30mm	wooden dowel	35 pcs
B		Ø6x35mm	Cam bolt	34 pcs
C		Ø15x11mm	Cam lock	34 pcs
D		Ø4x50mm	Fast screw	4pcs
E		Ø8x5x16mm	Shelf support pin	20pcs
F			Single link	4pcs
G		Ø4x15mm	Flat head Screw	12 pcs
H		Ø3x15mm	Screw	46pcs
I		175*29*8mm	Iron	2pcs
J			Glue tube	1pcs
K		Ø25mm	paper cover	34 pcs
L			adjustable stopper	4pcs
M		Ø8mm	Door stop points	4pcs


 
Step 1

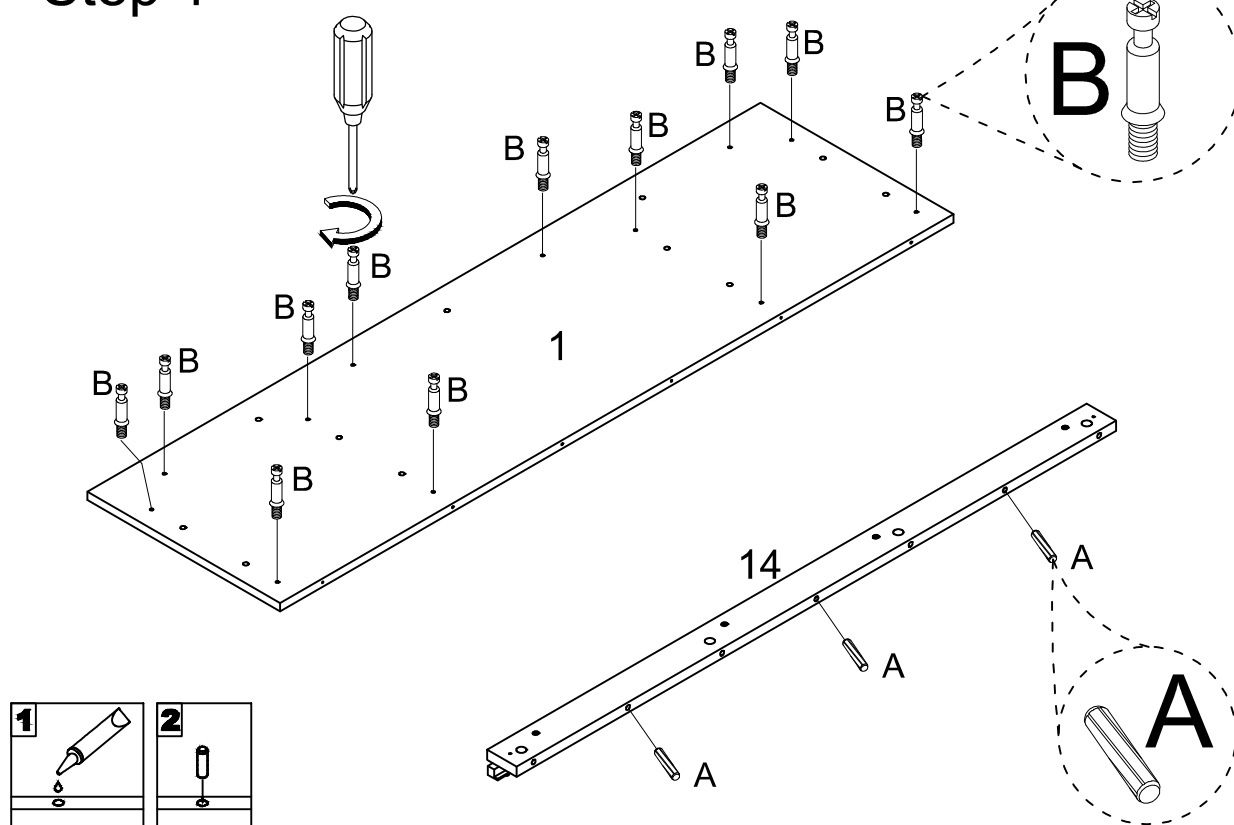


 
Step 2

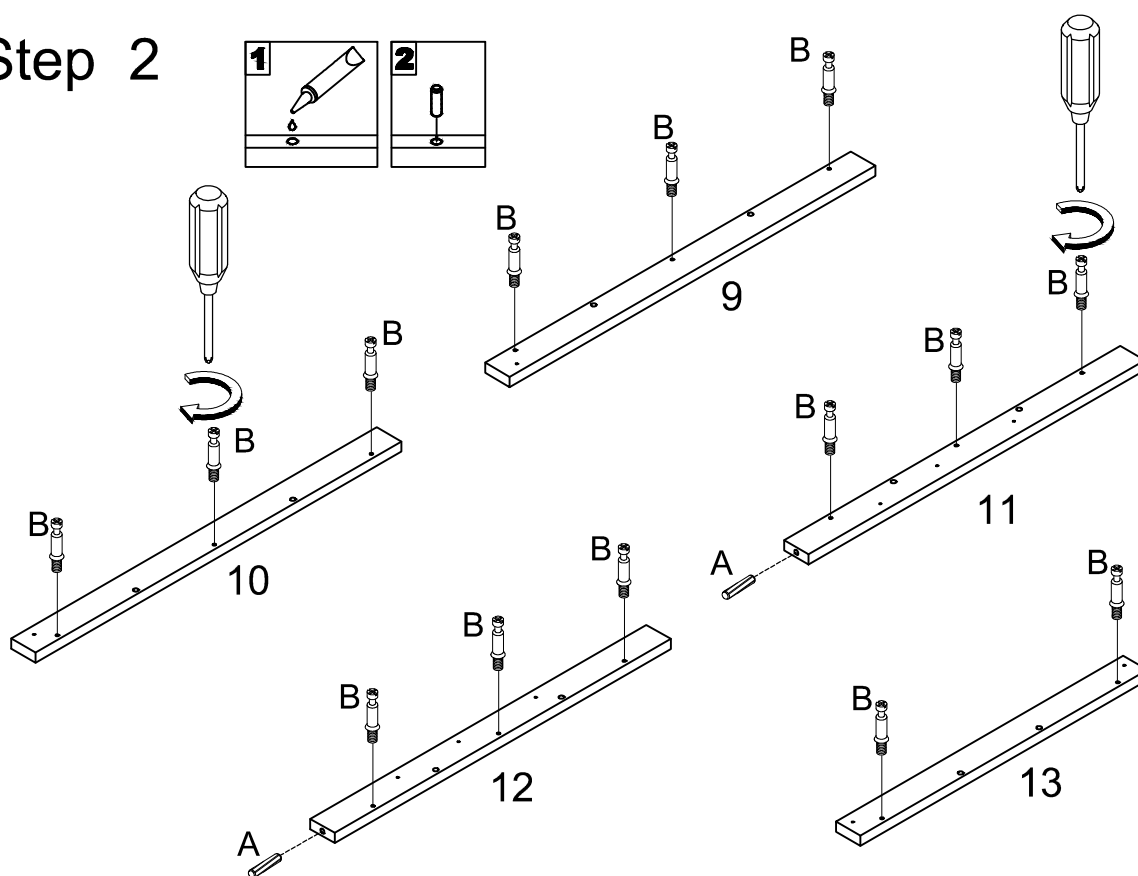

  
Step 3

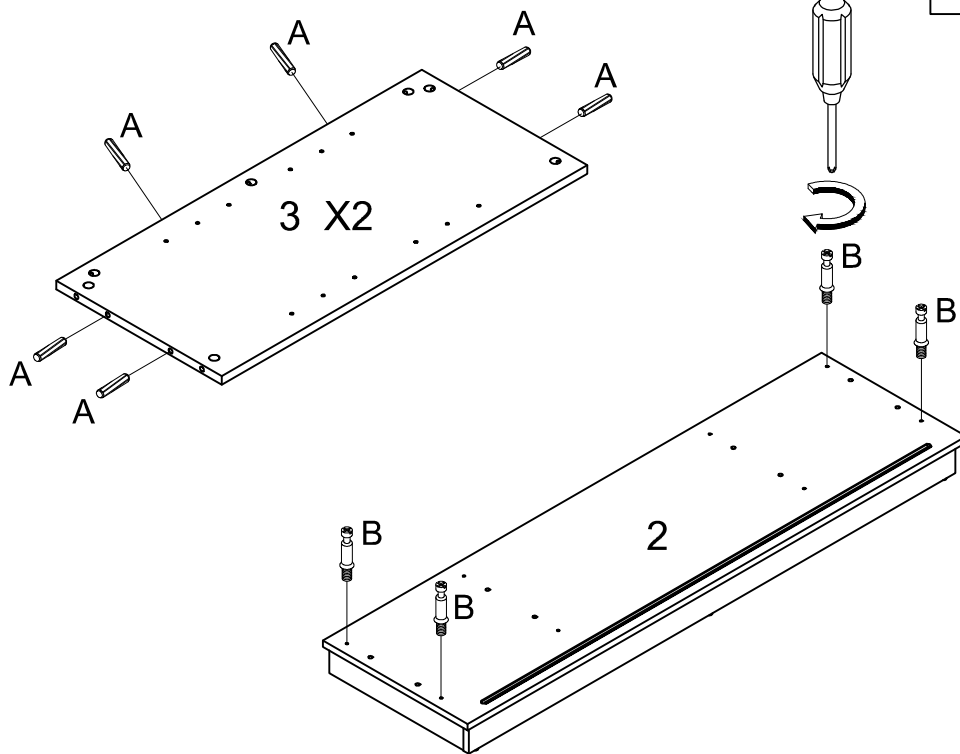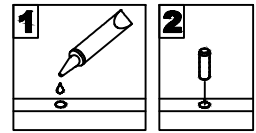

  
Step 4

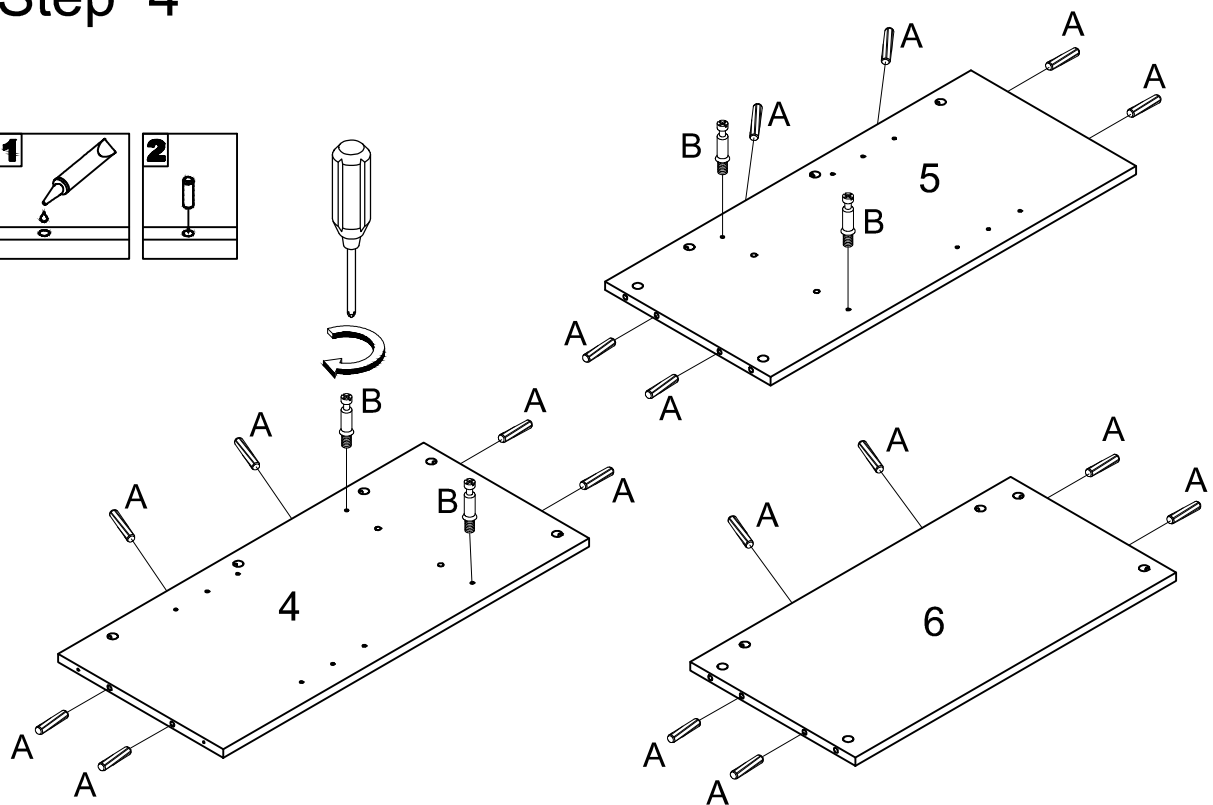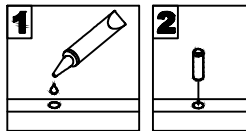




 
Step 5

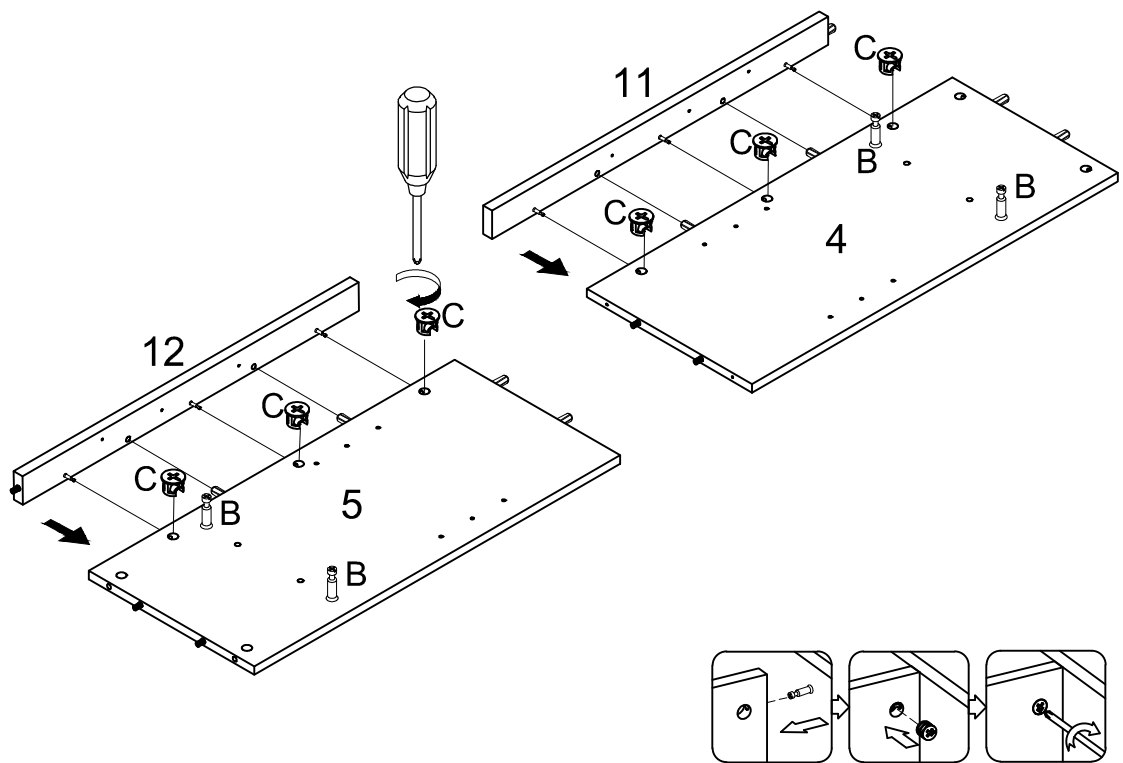


 
Step 6

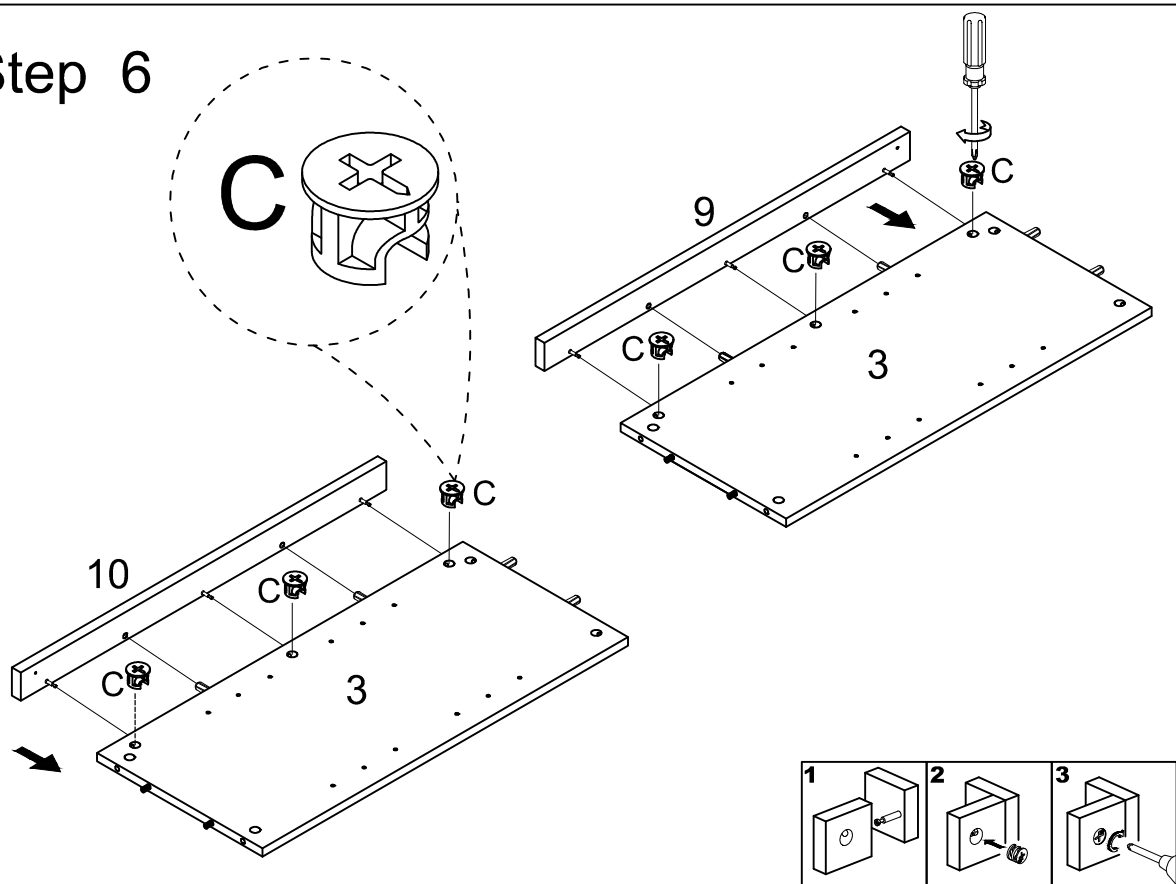

    
Step 7

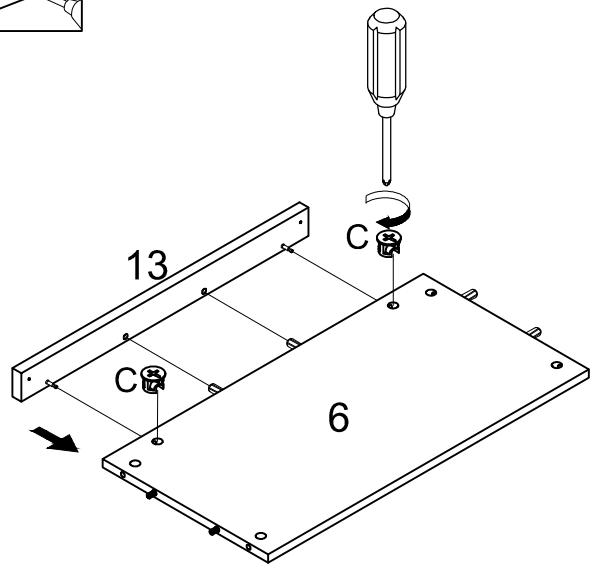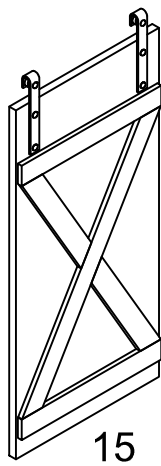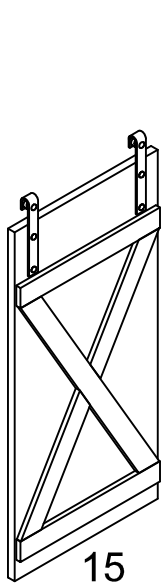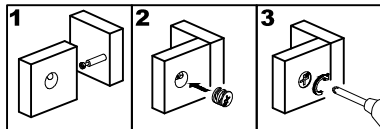

  
Step 8

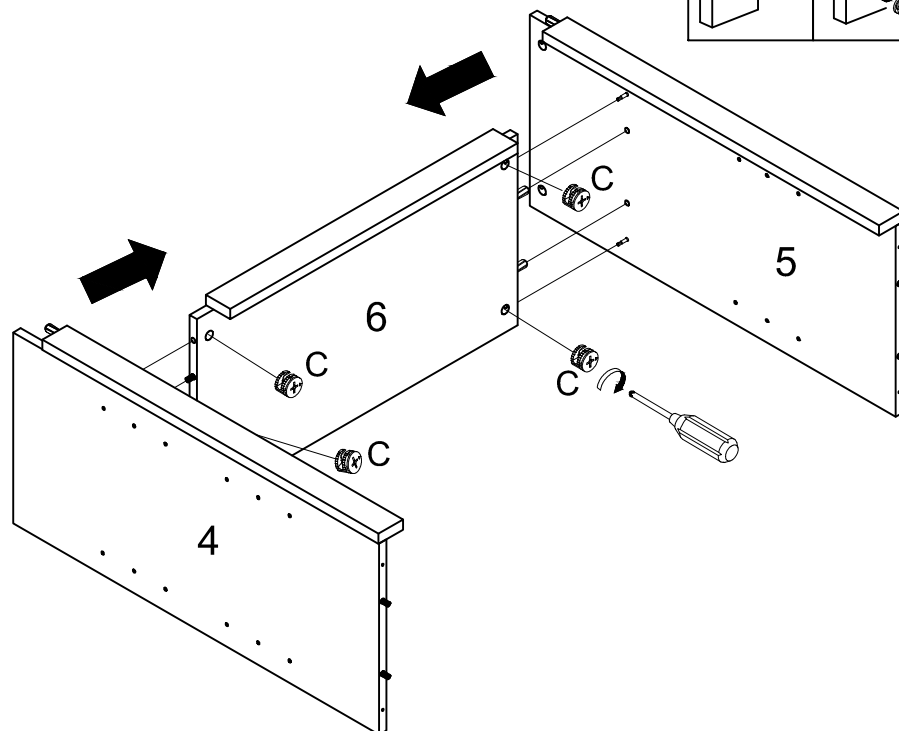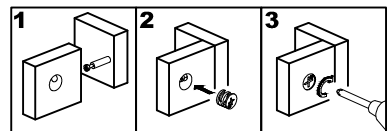

 
Step 9

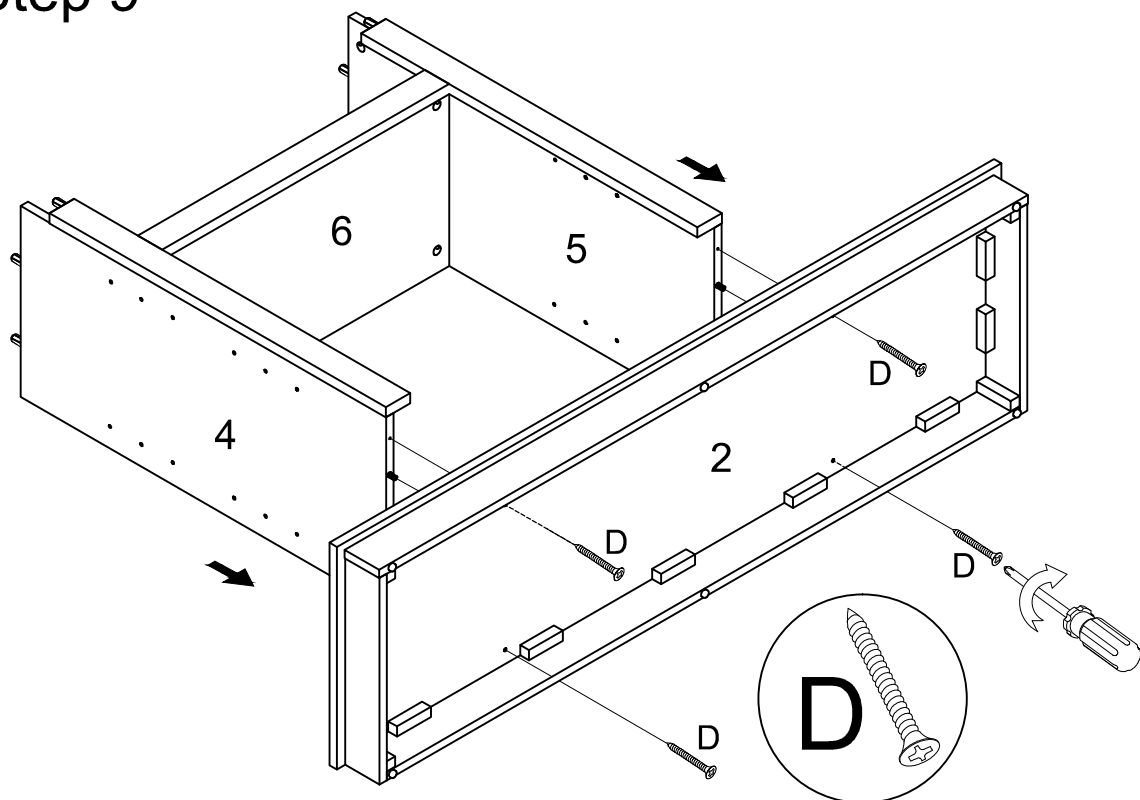

 
Step 10

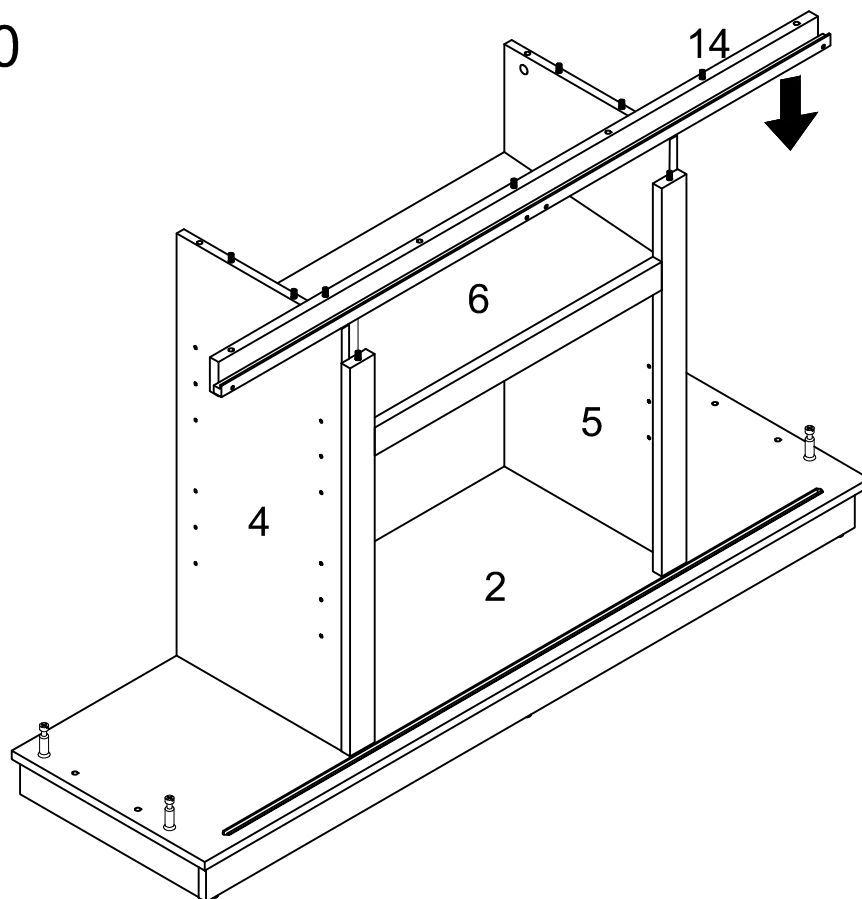

 
Step 11

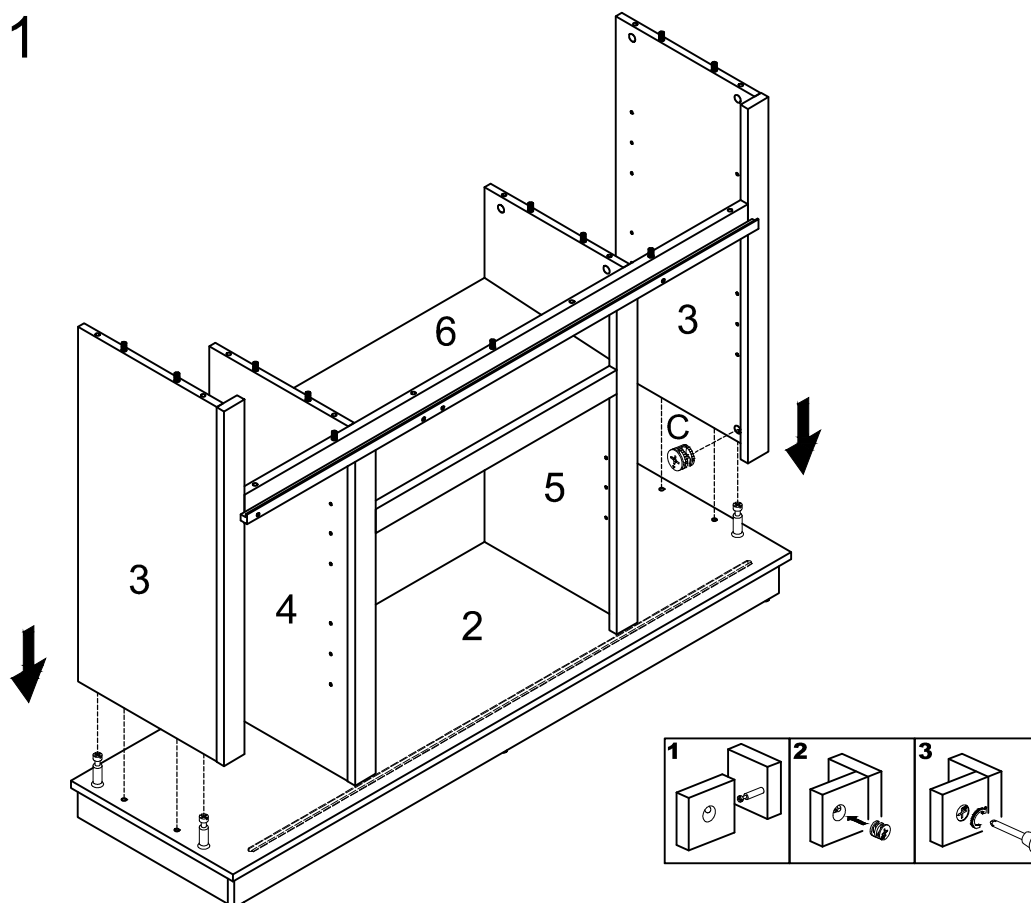

 
Step 12

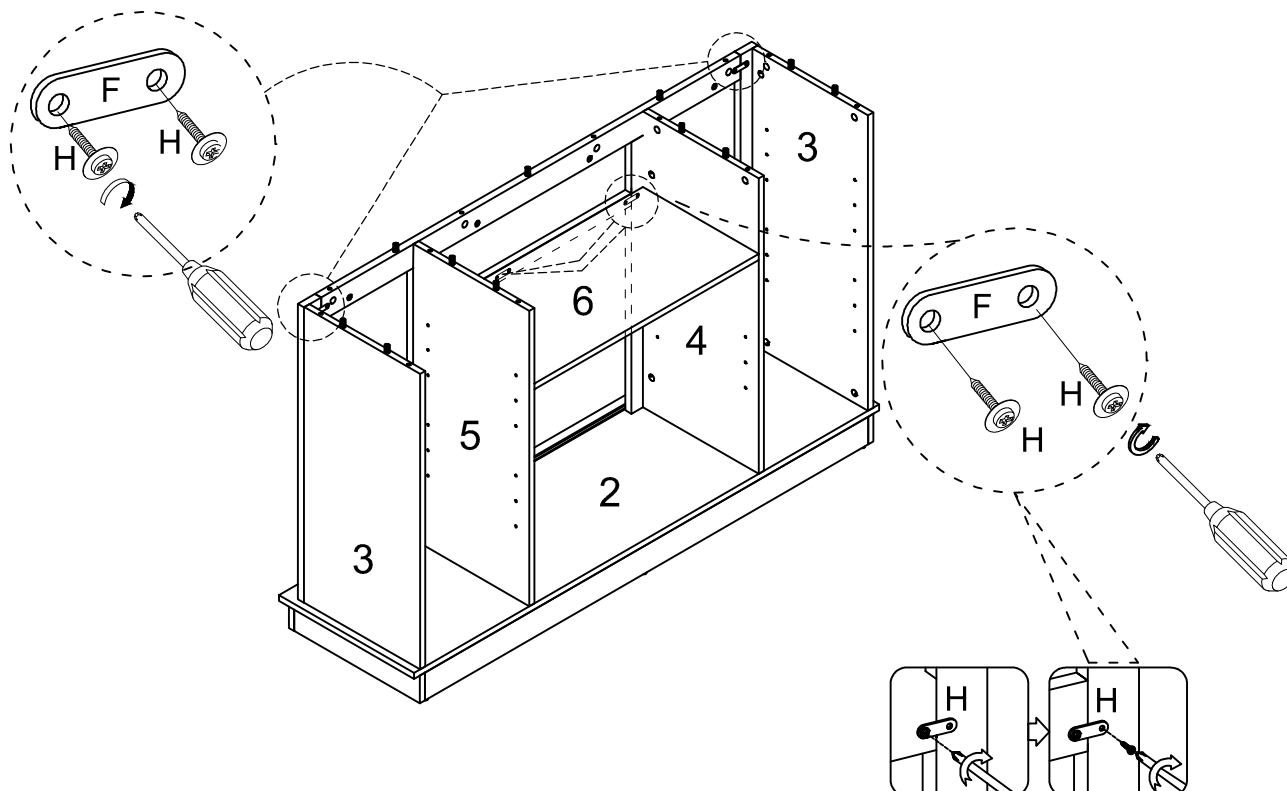

 
Step 13

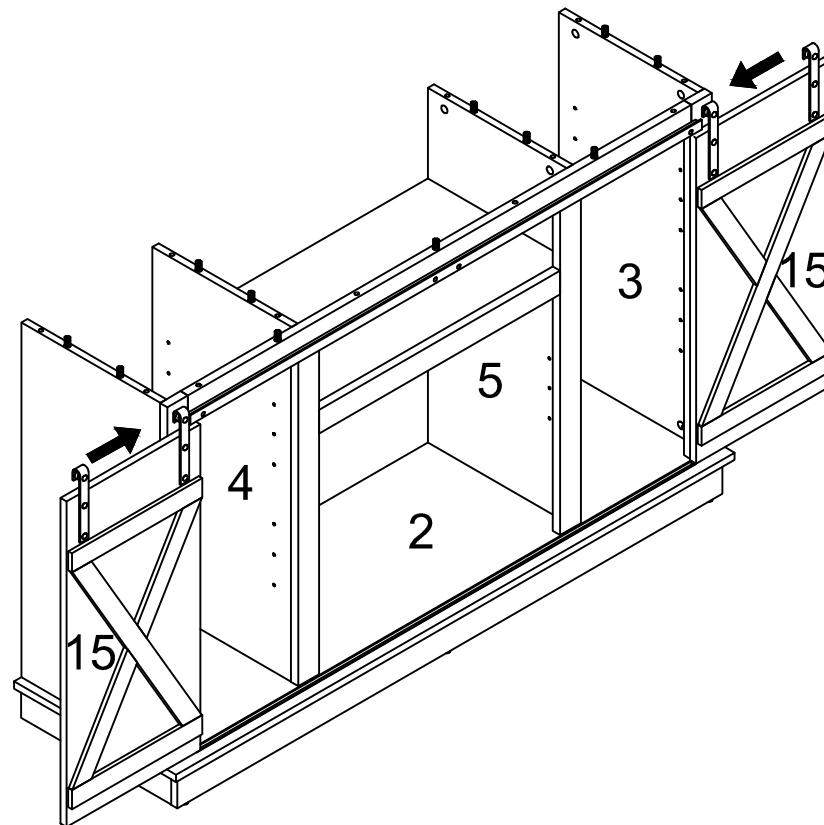

 Step 14

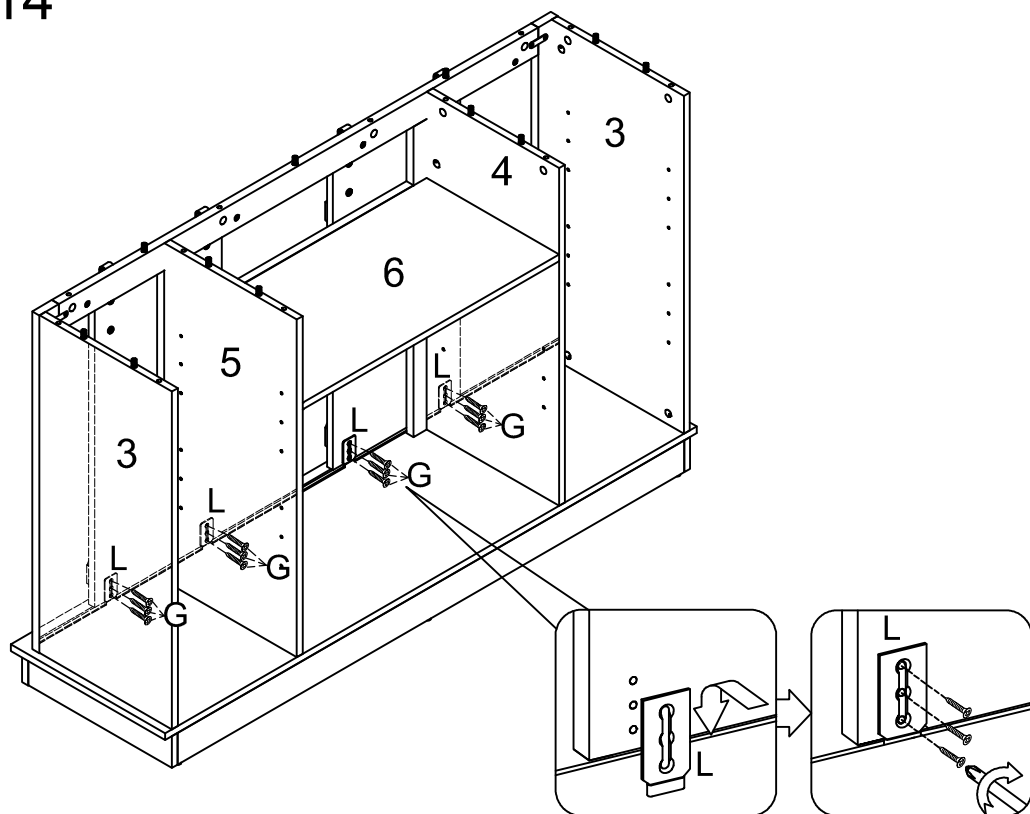


 Step 15

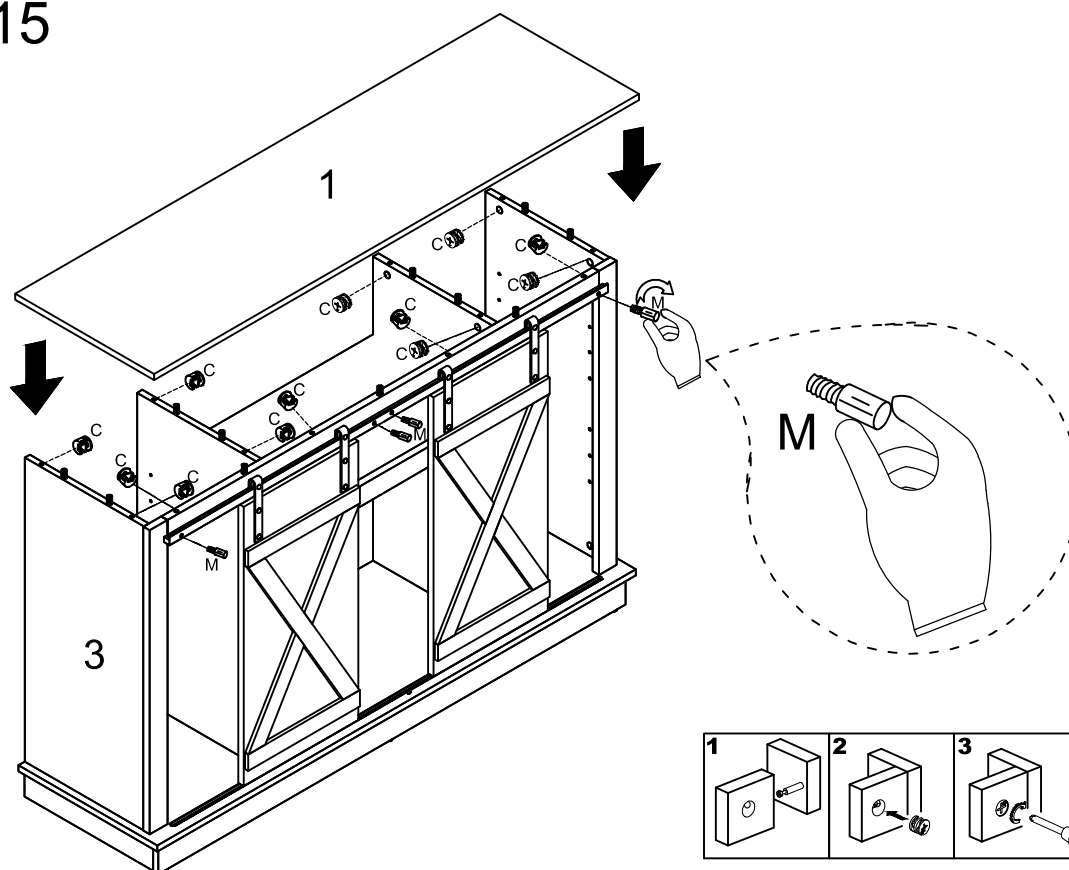


Step 16

 Option A(TV Stand)

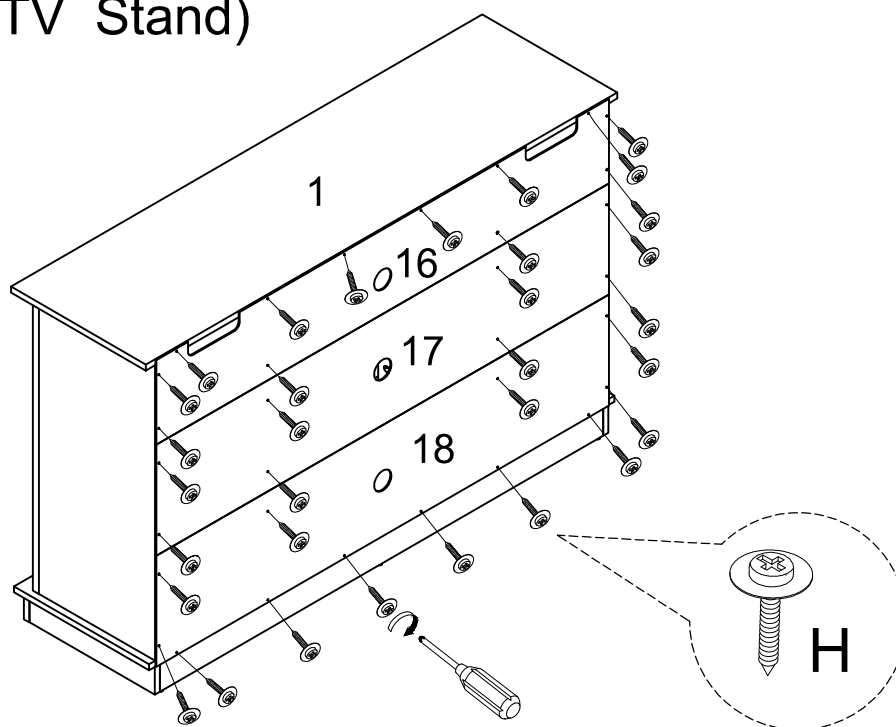


Step 17

 Option A(TV Stand)

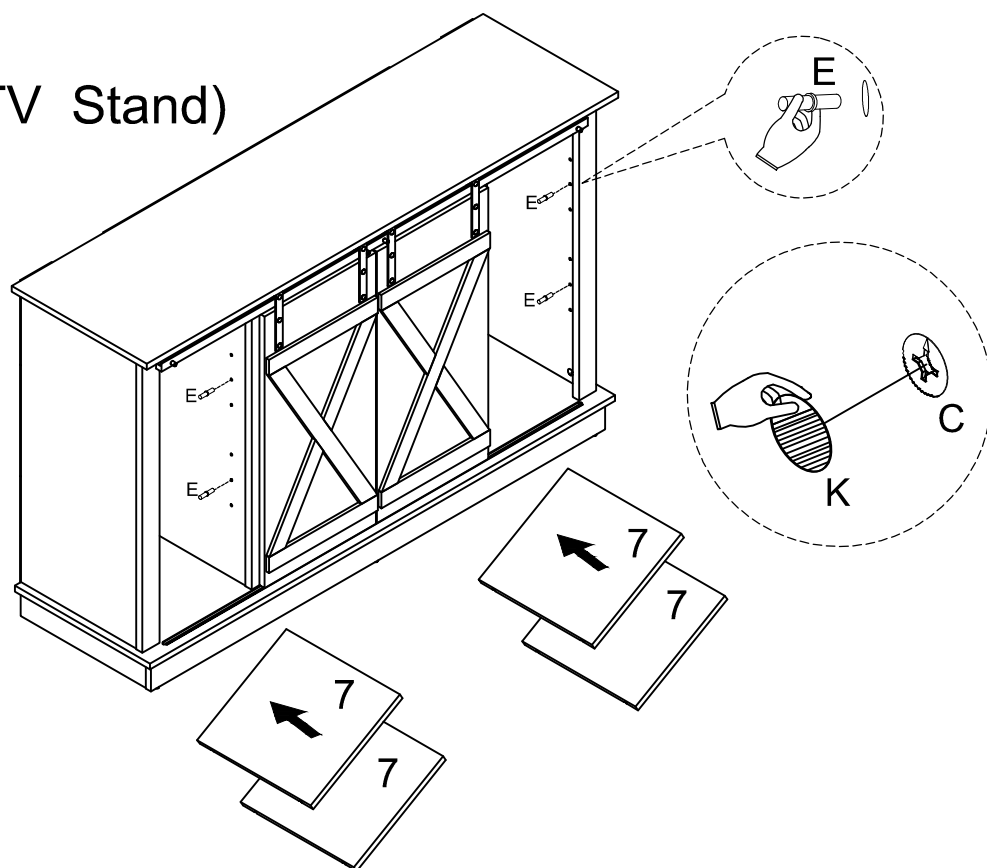

Step 18

 
Option A(TV Stand)

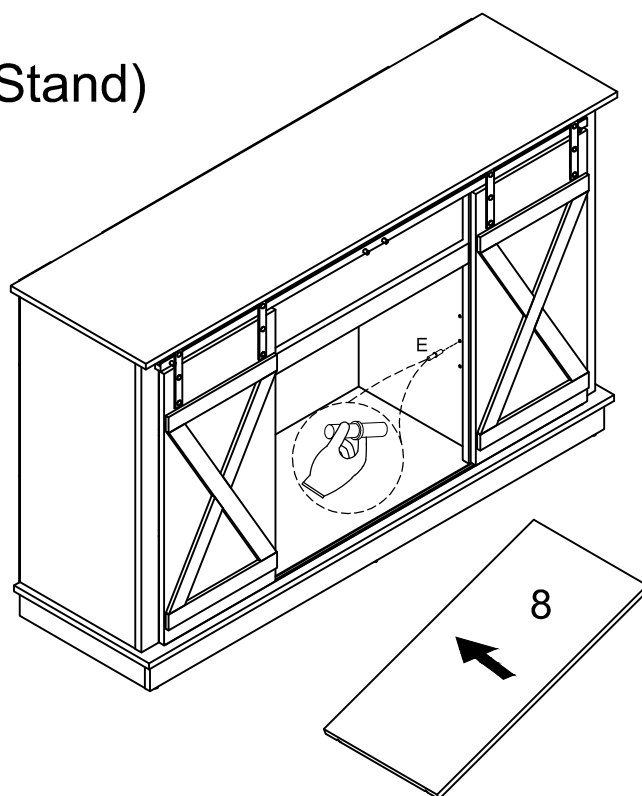

Step 19


Option A(TV Stand)

 Final assembly

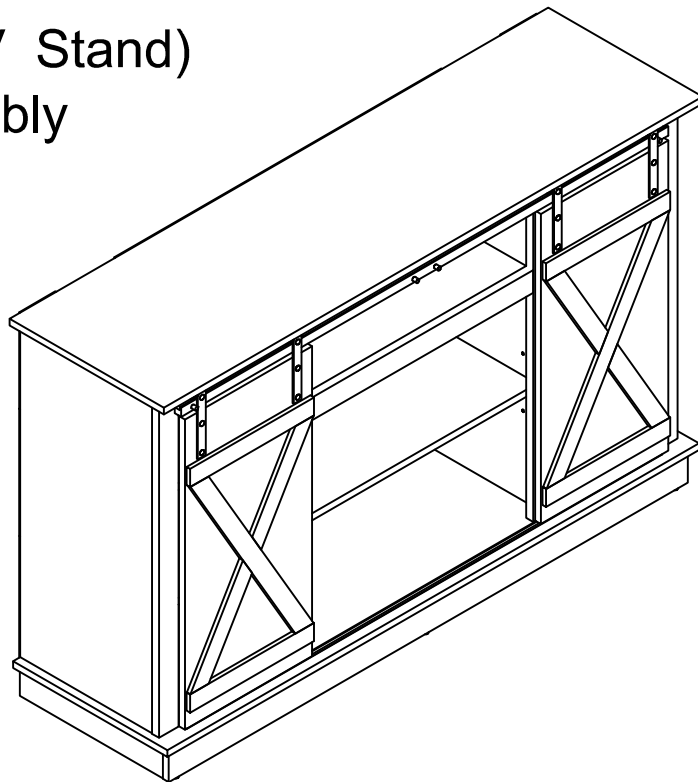


Step20

 Option B(Fireplace)

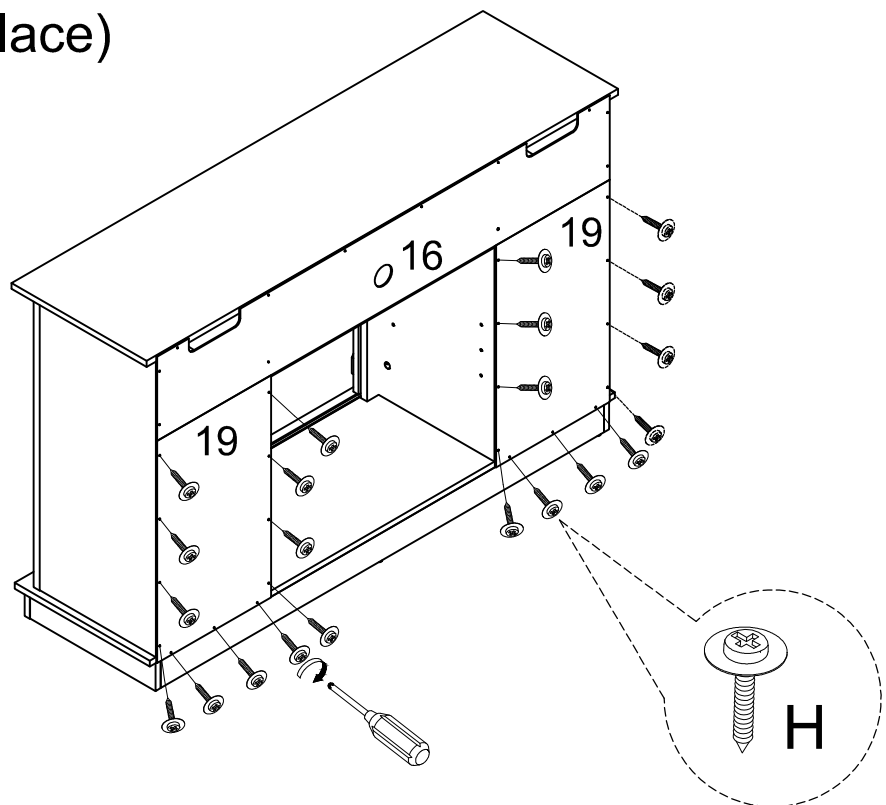

Step 21

 Option B(Fireplace)

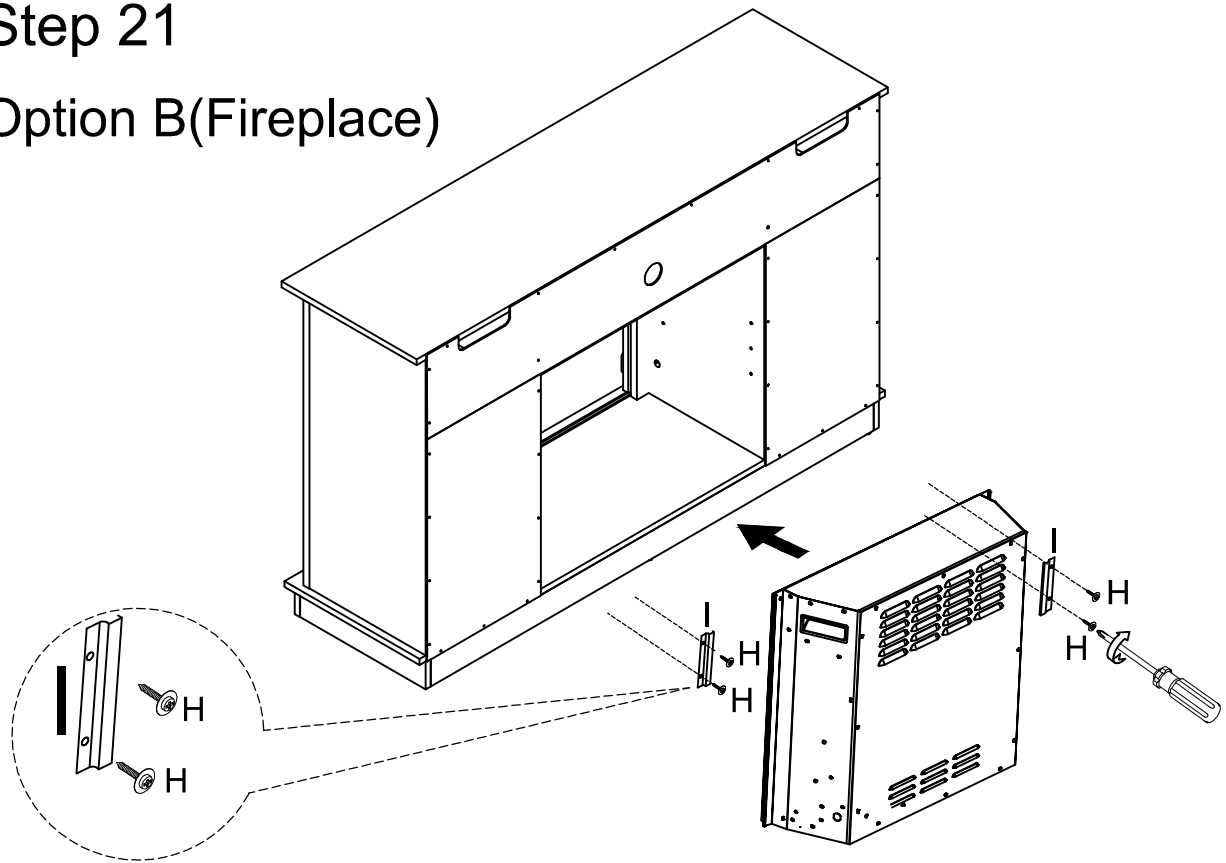

Step 22

Option B(Fireplace)

Final assembly

