


HOME SOURCE


INDUSTRIES

www.homesourceind.com
service@homesourceind.com

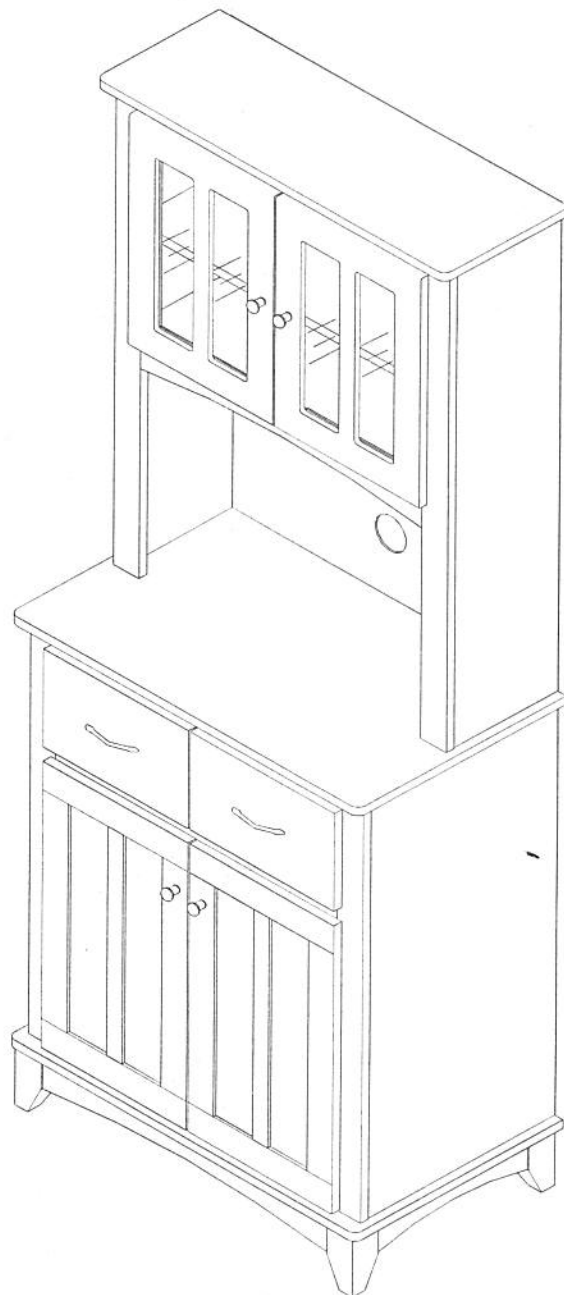


Oak Hill / Brook Microwave Cabinet


P.1

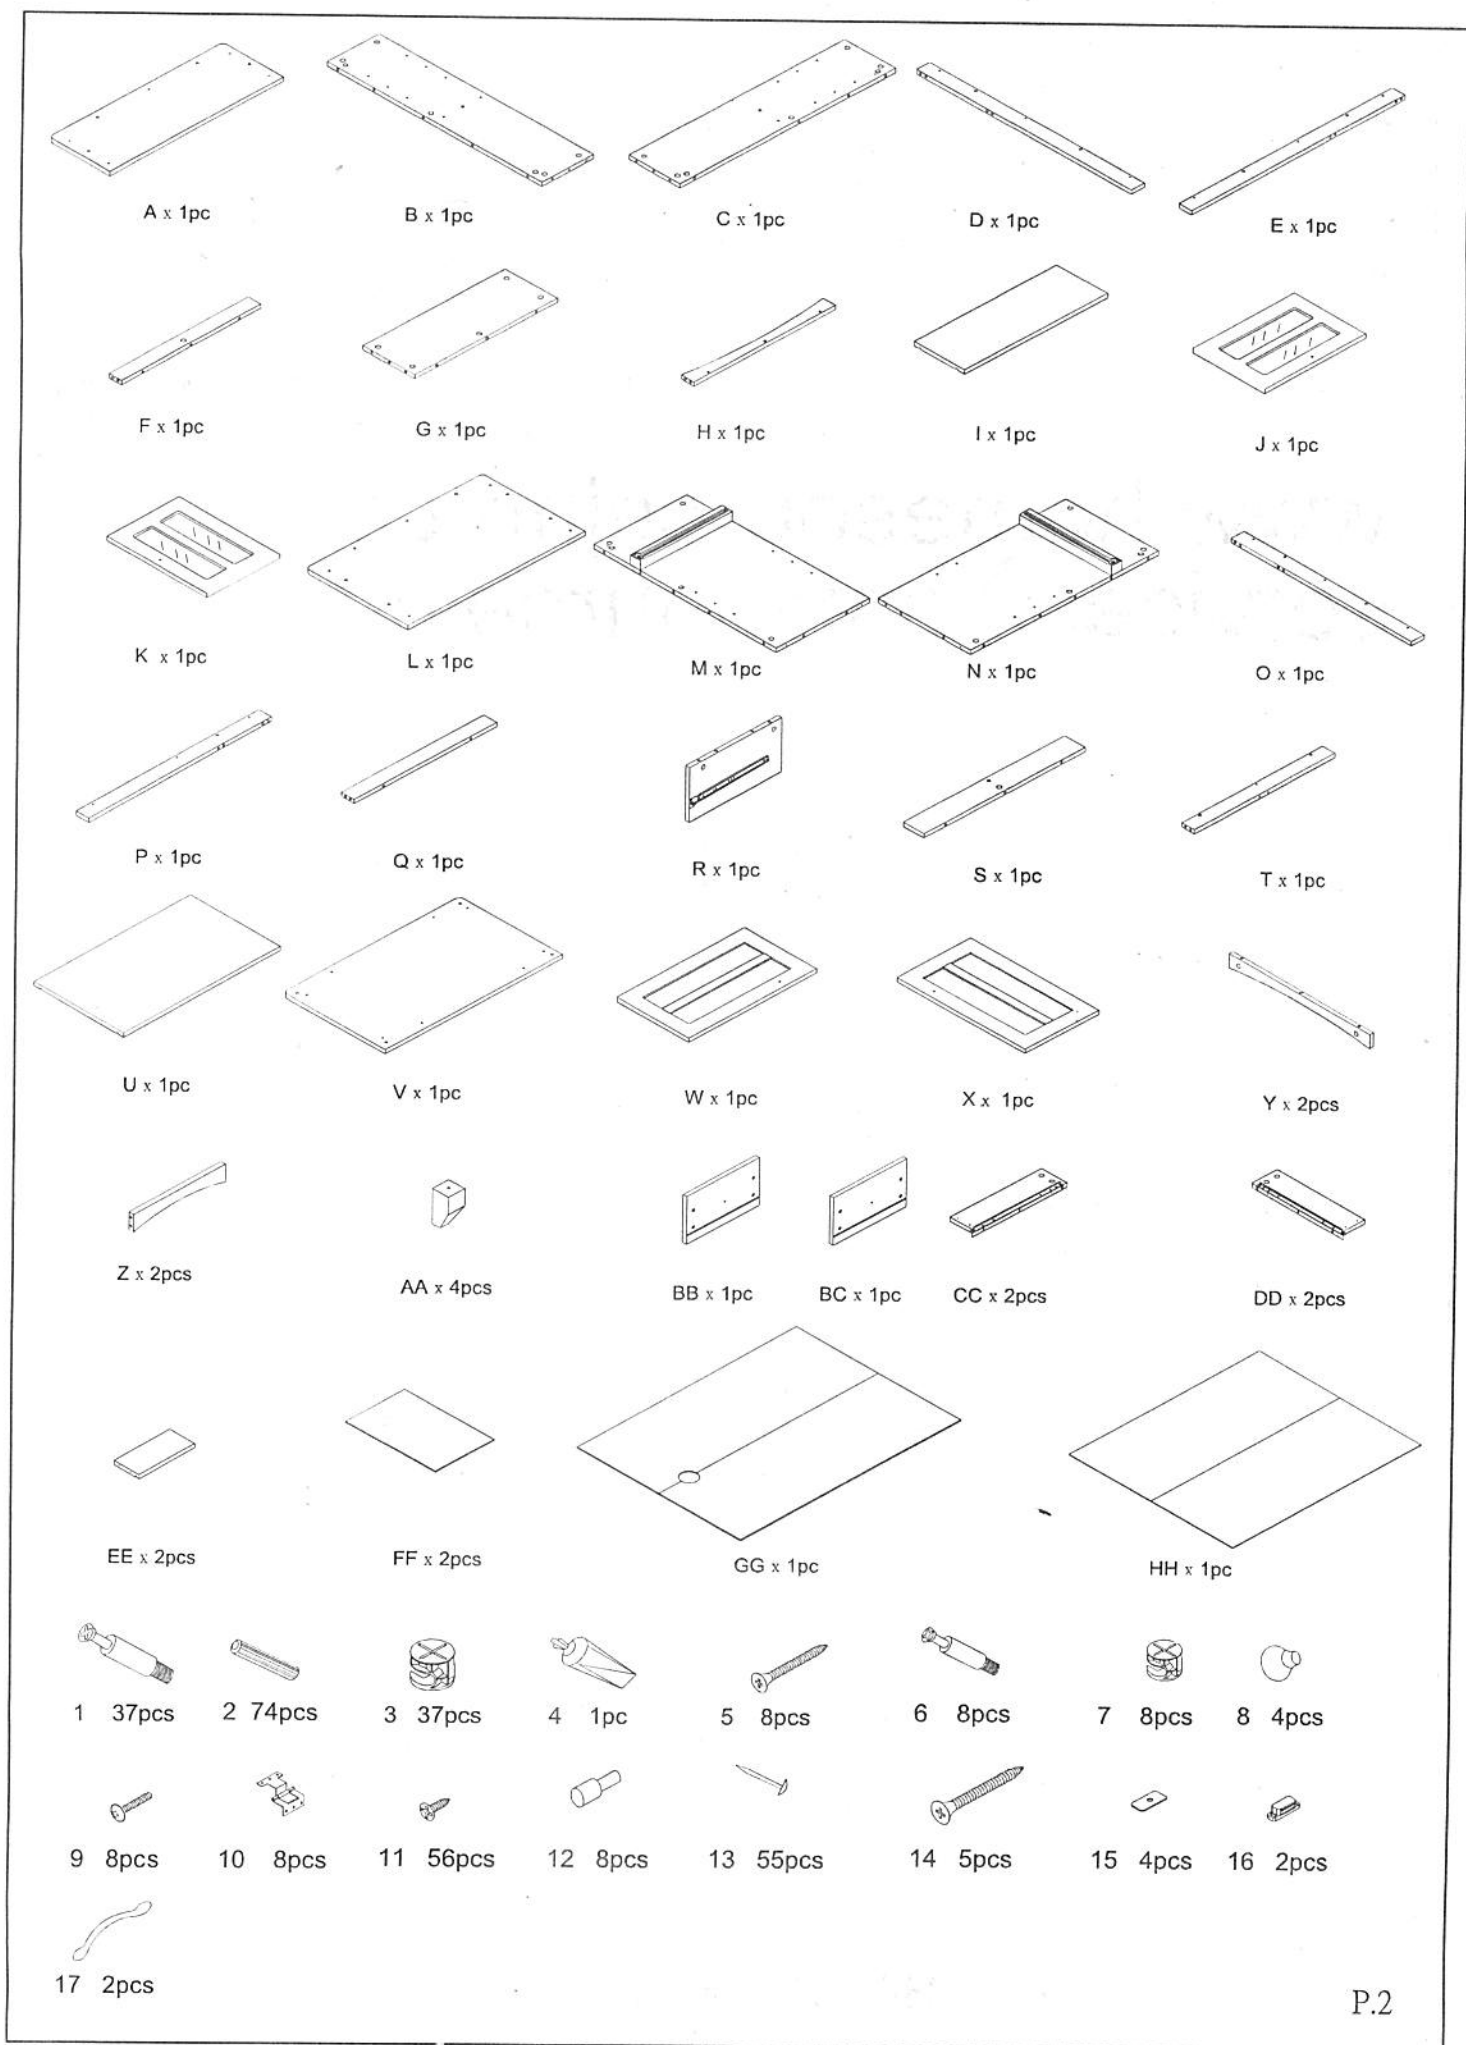


Step 1

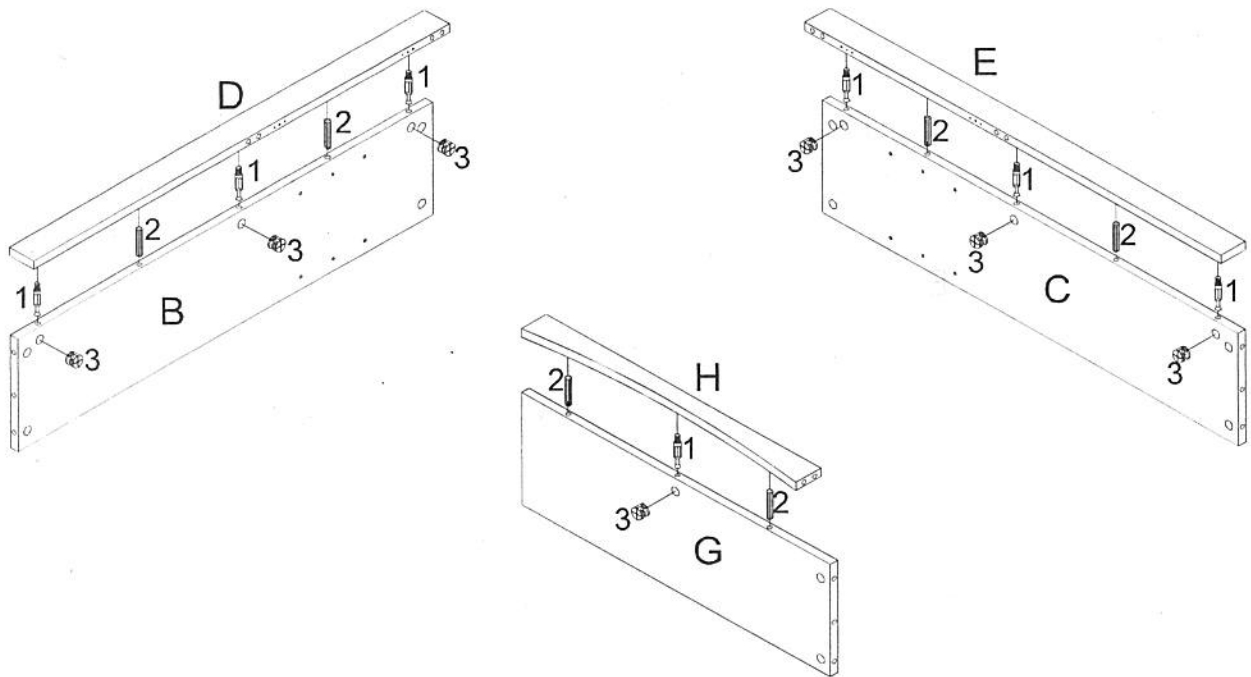


Step 2

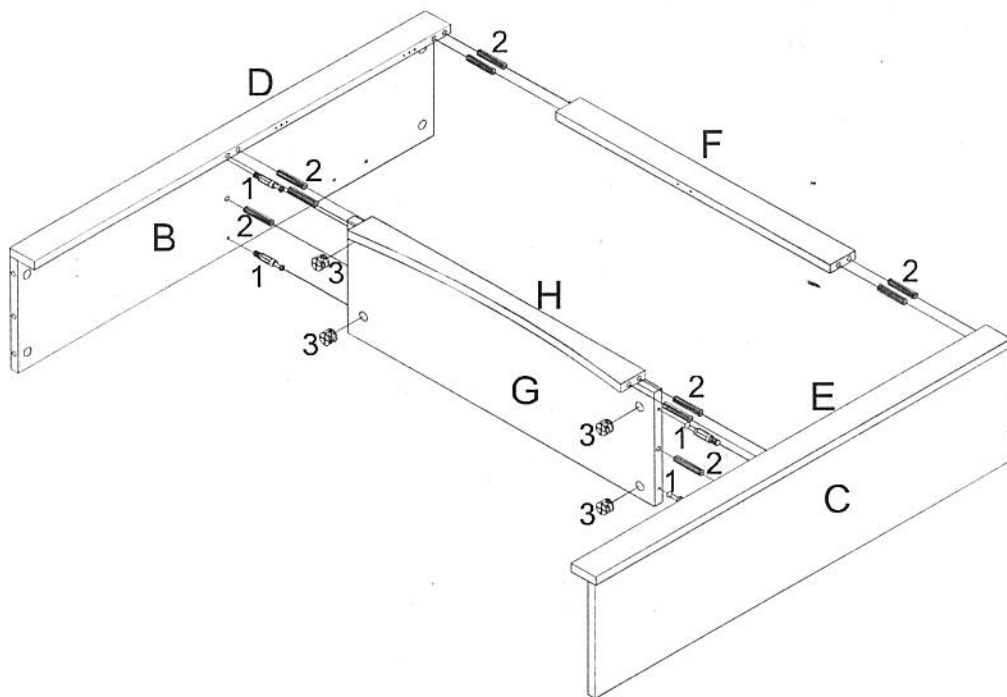


Step 3

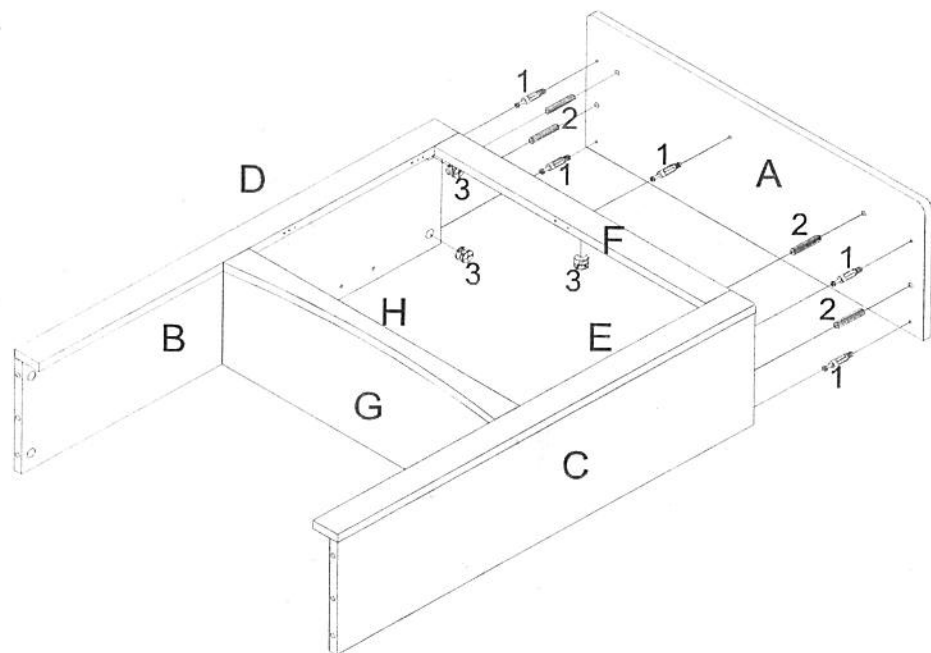


Step 4

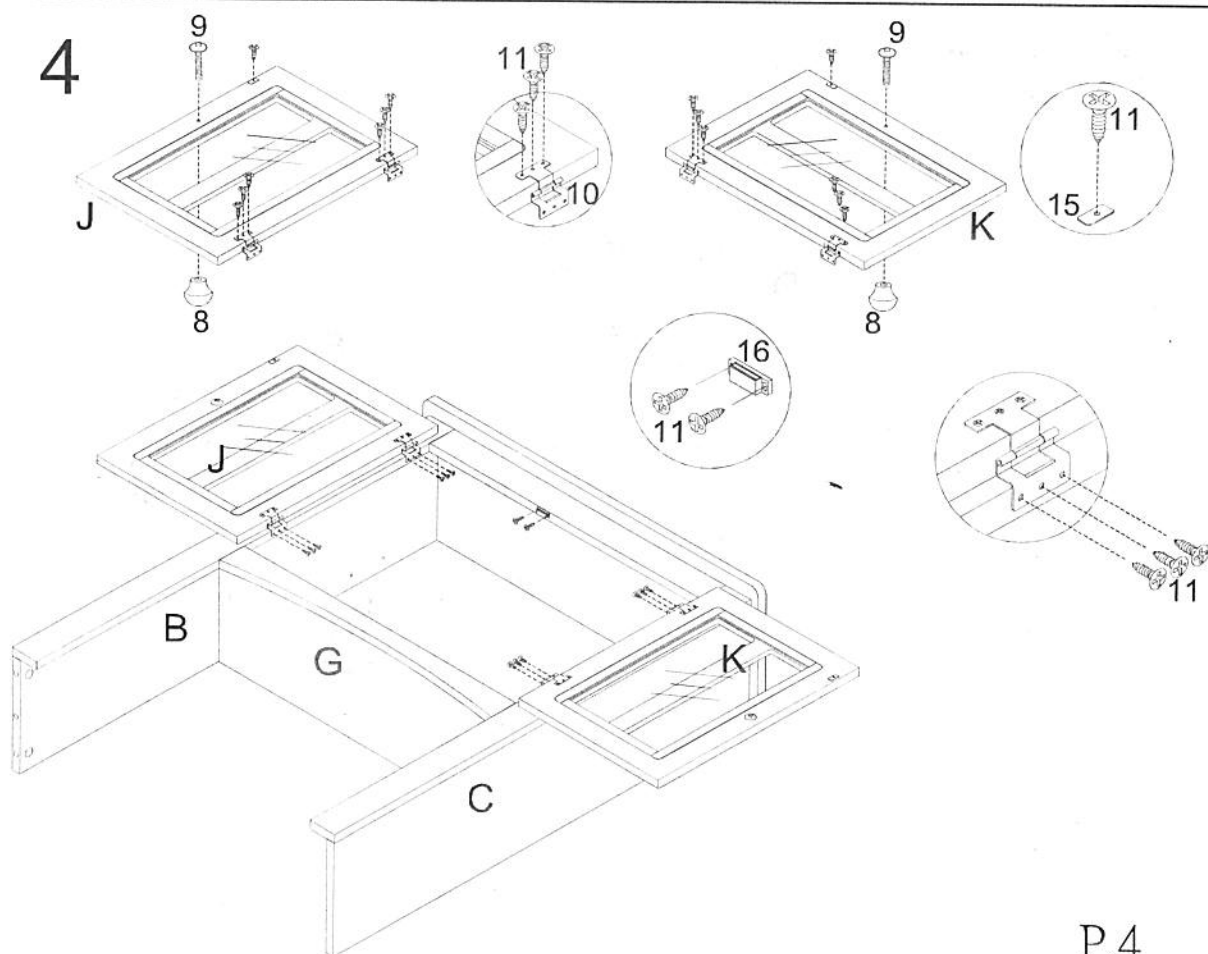


Step 5

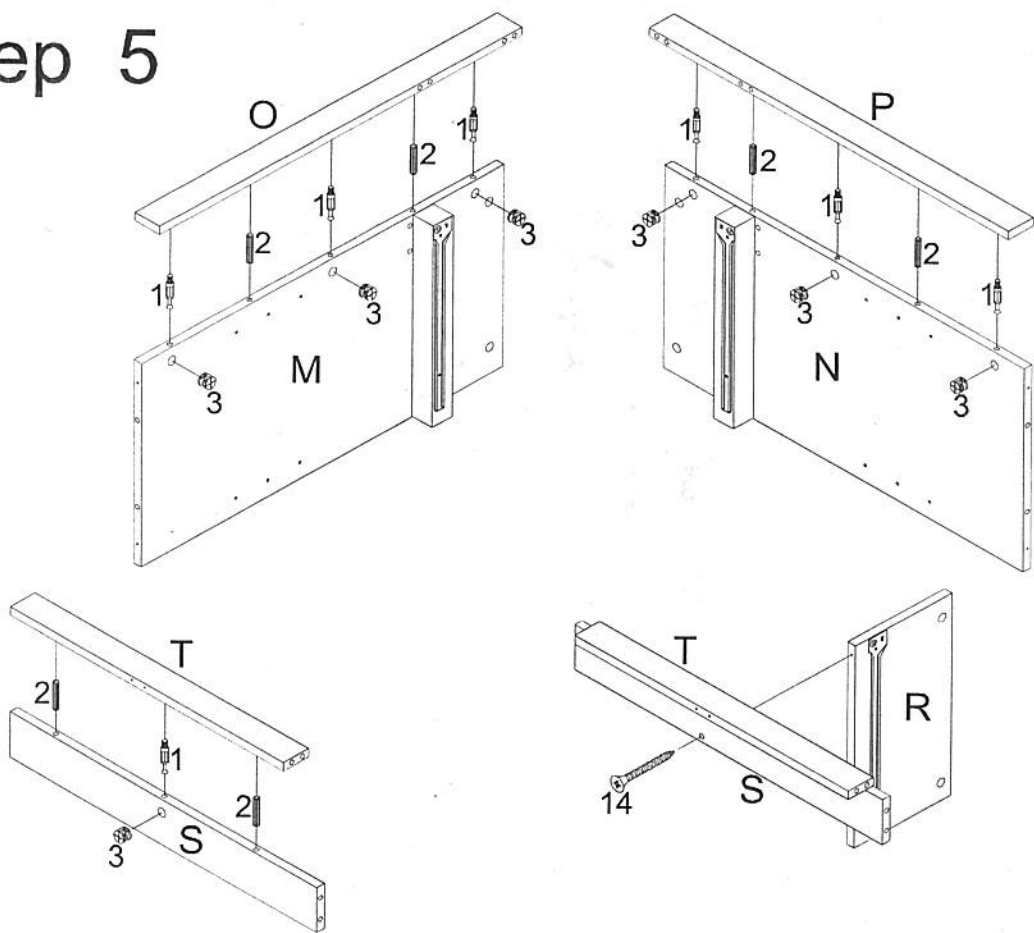


Step 6

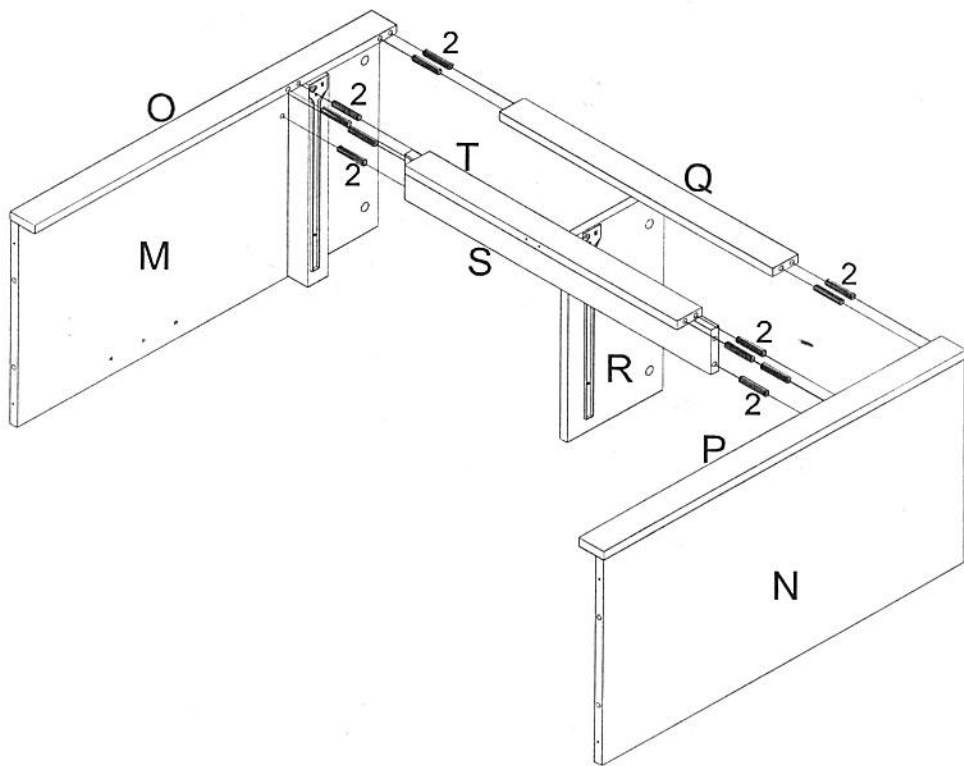


Step 7

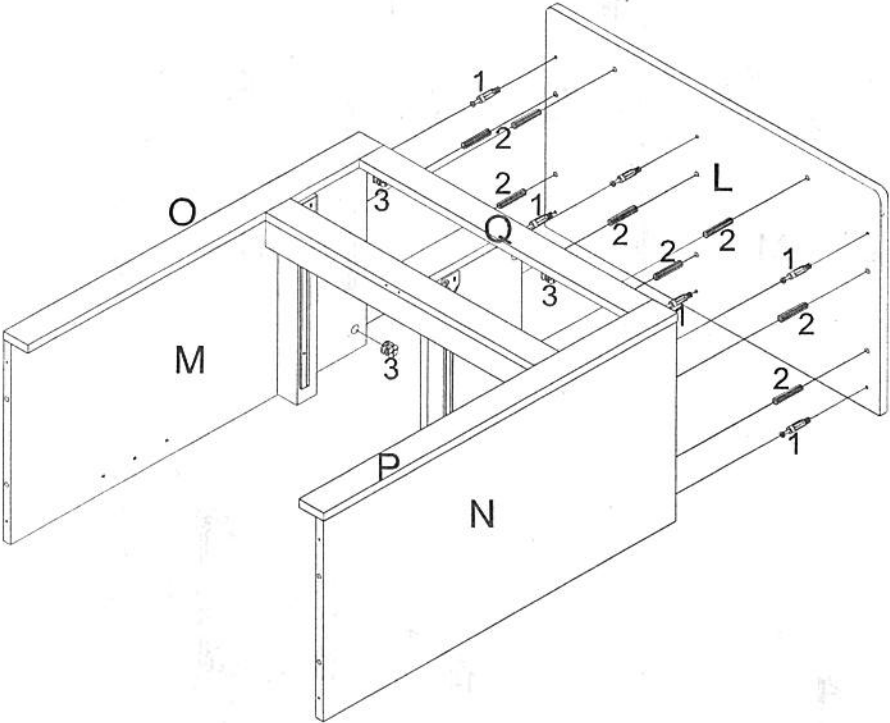


Step 8

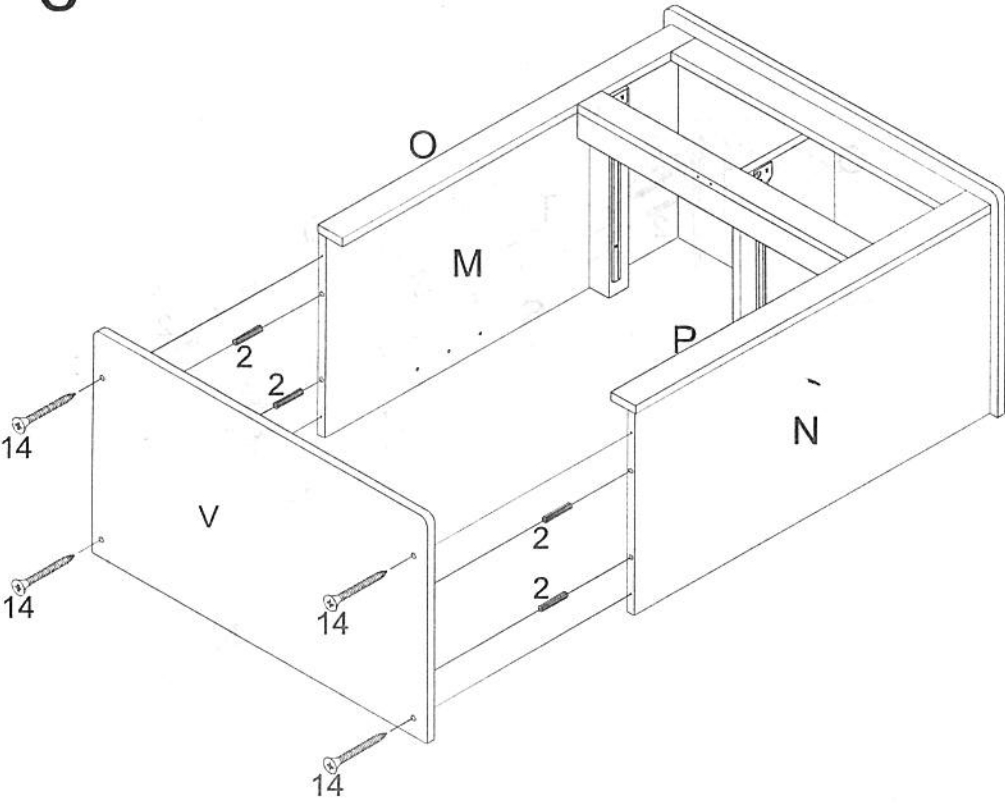


Step 9

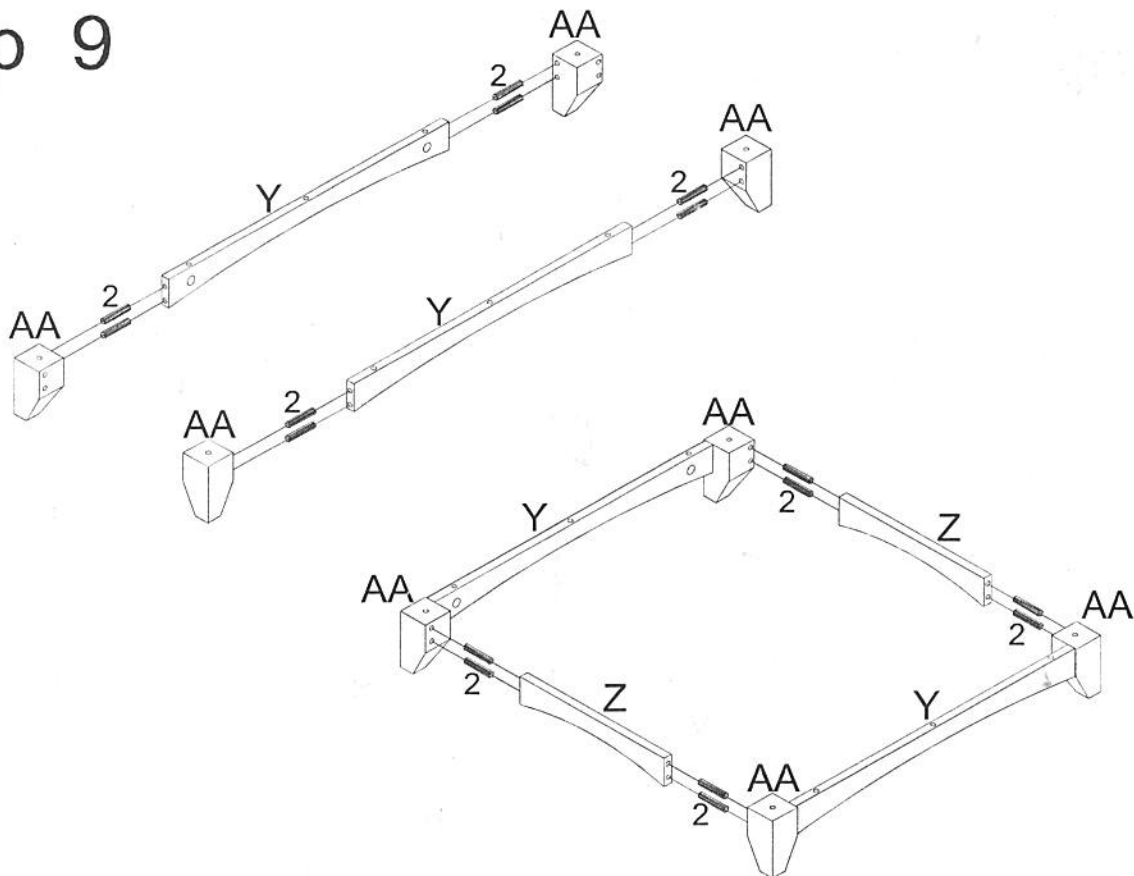


Step 10

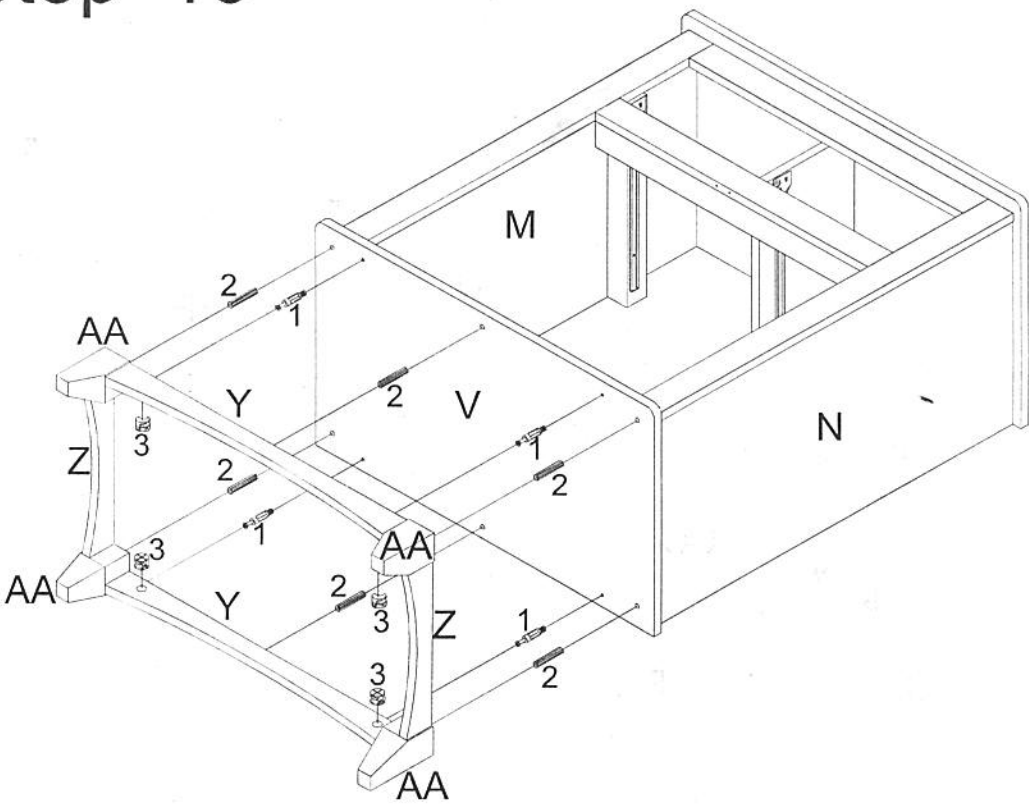


Step 11

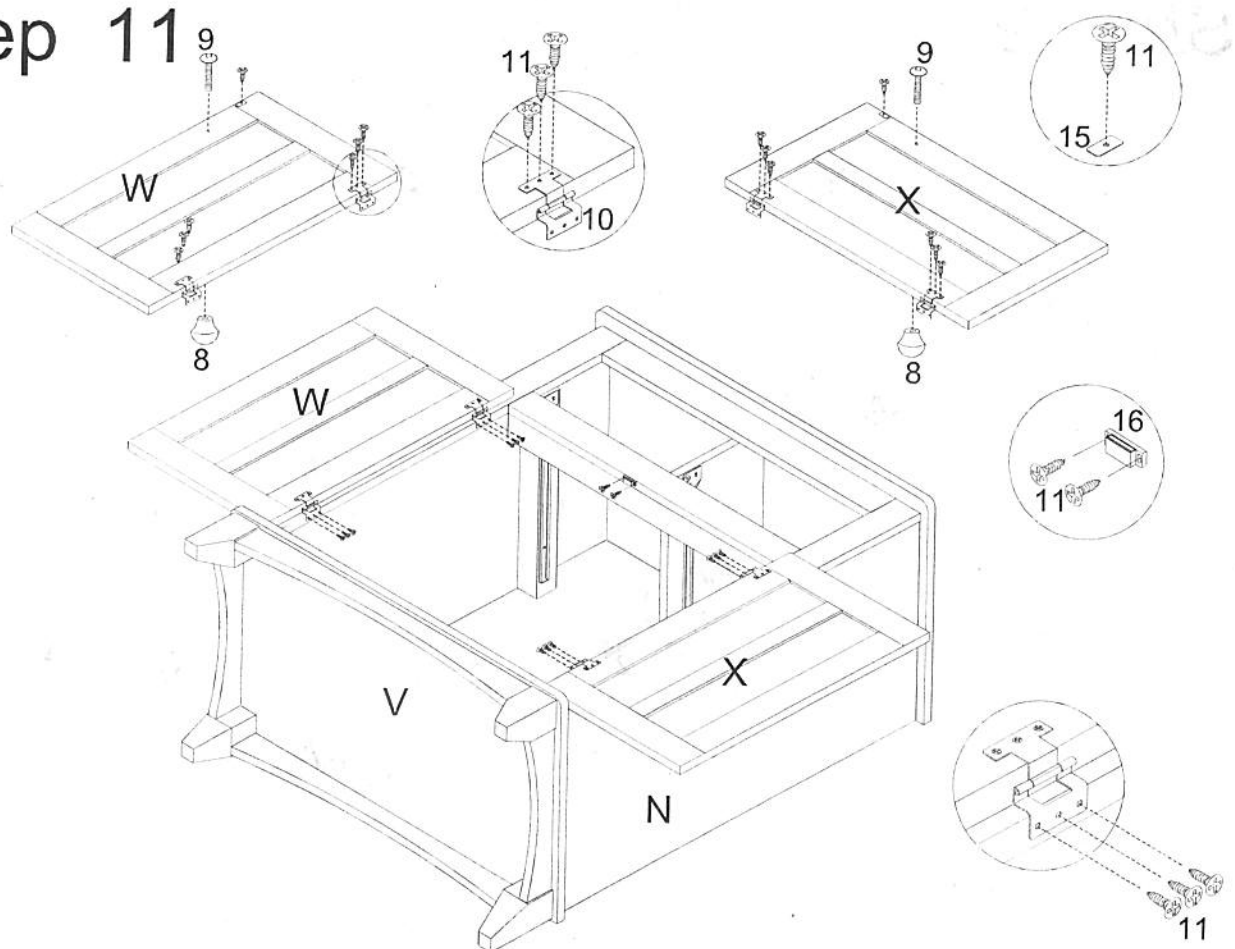


Step 12

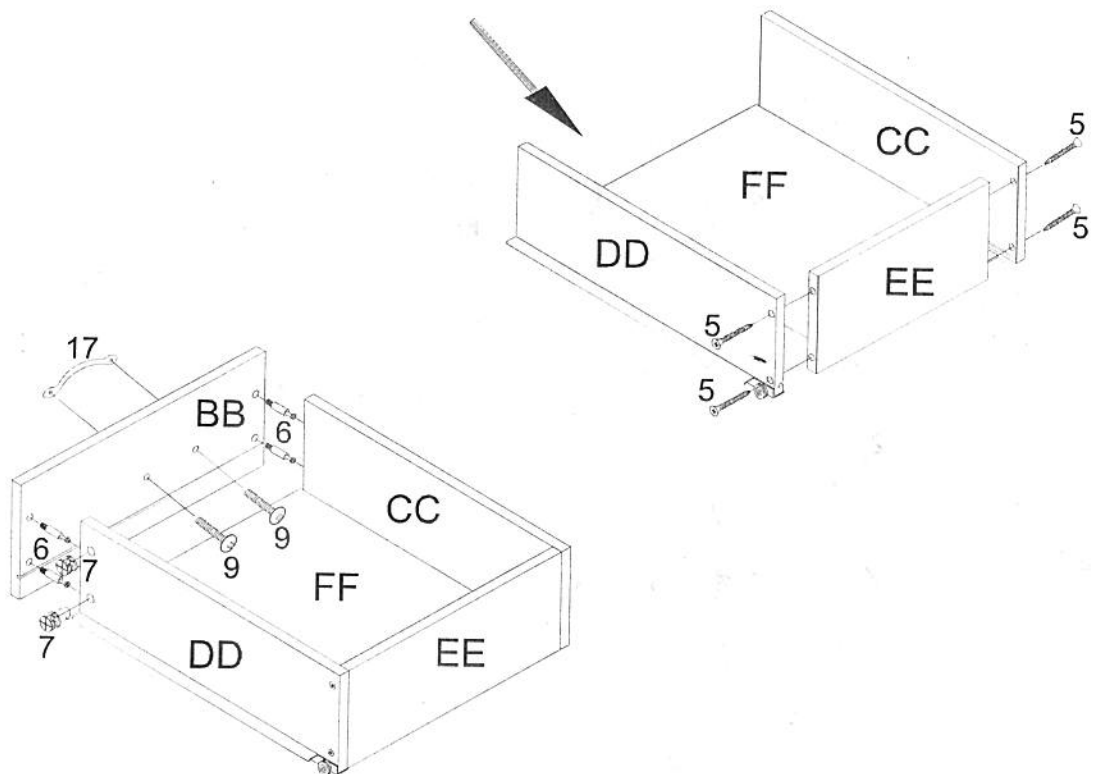


Step 13

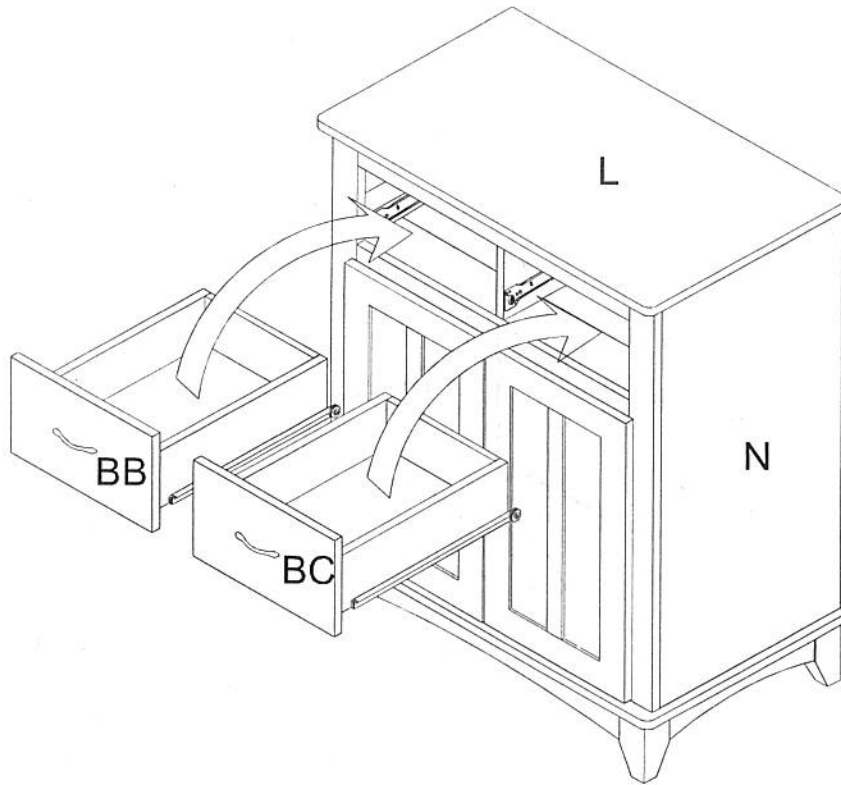


Step 14

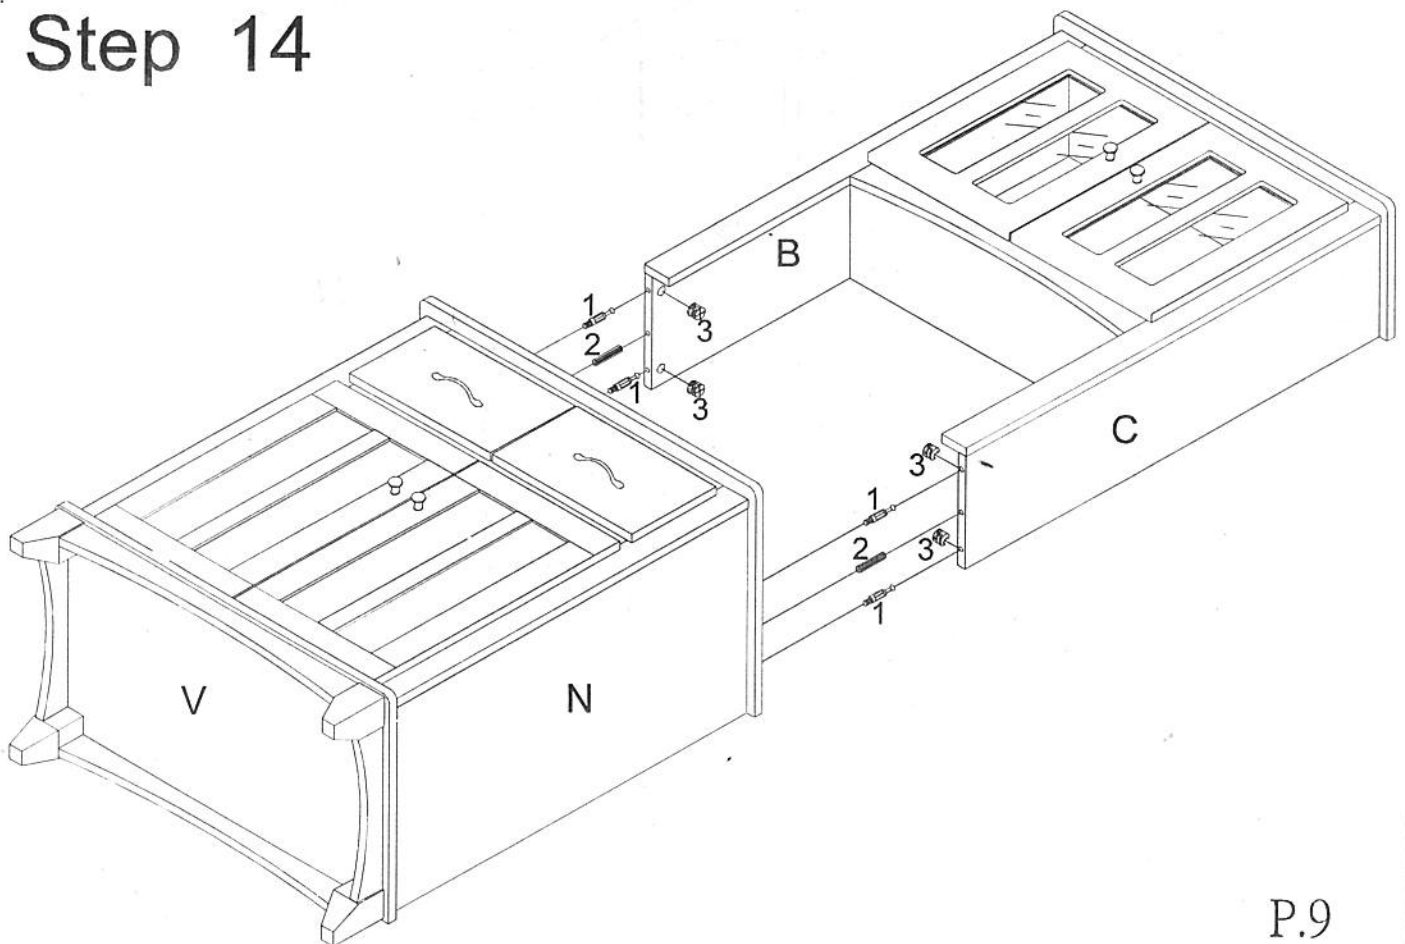


Step 15

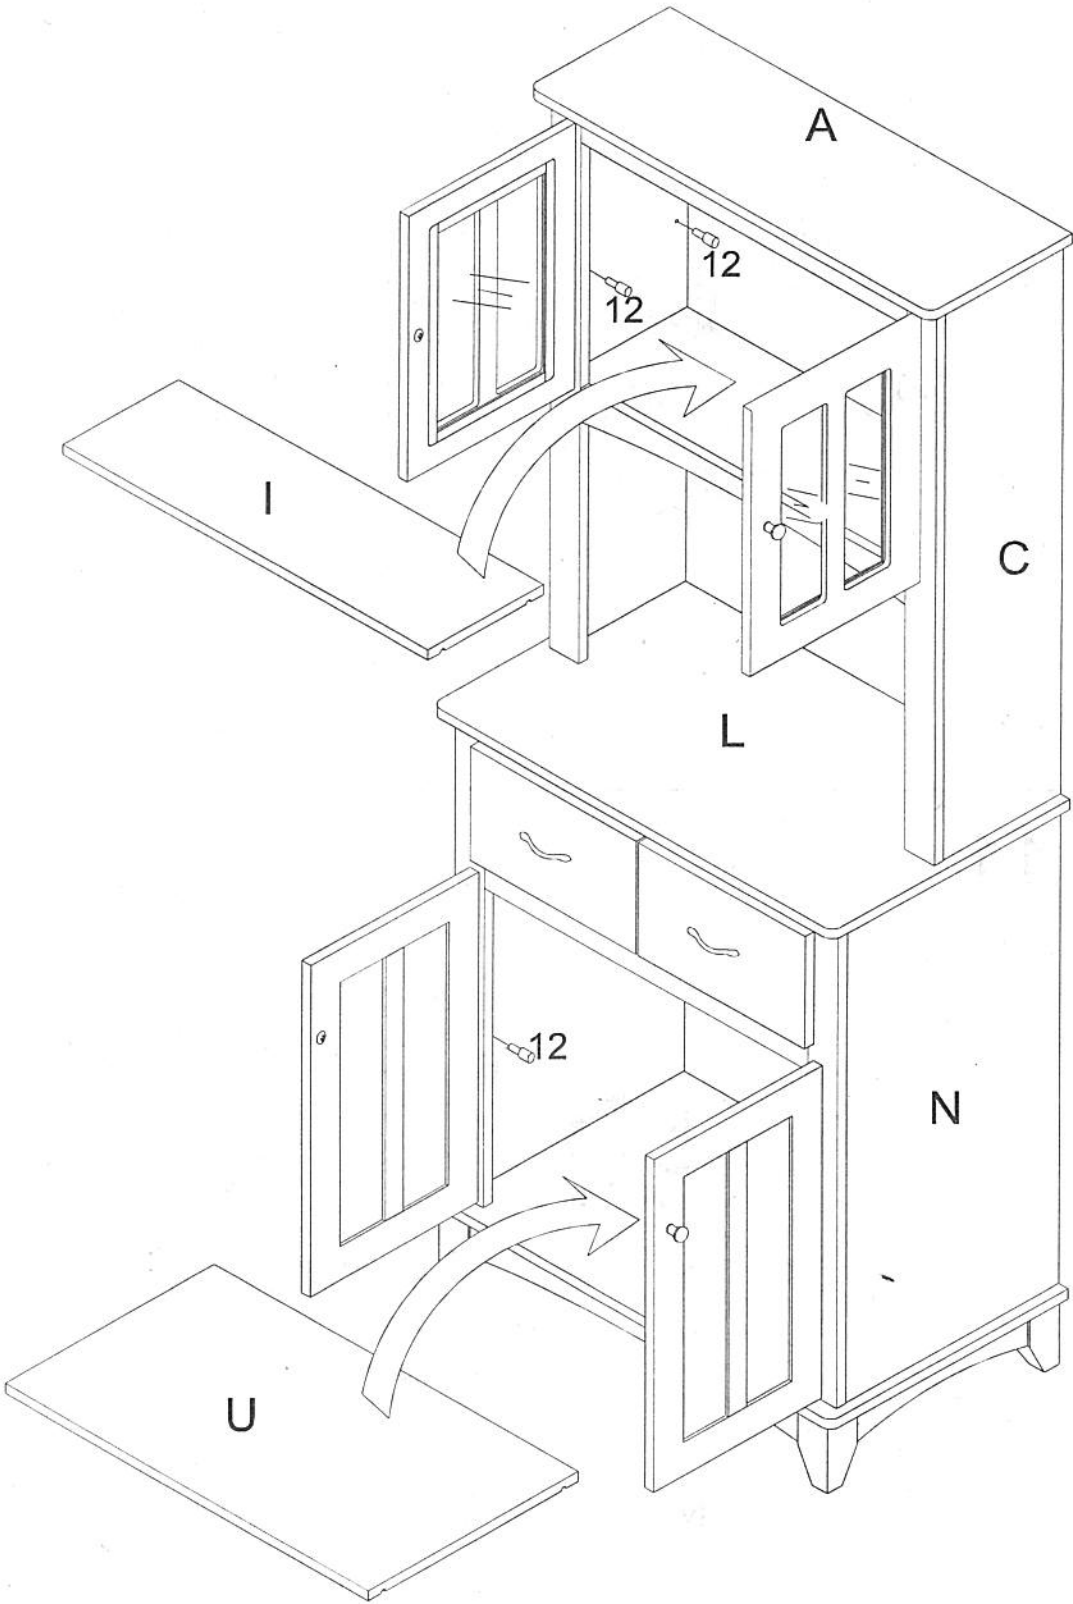

Step 16

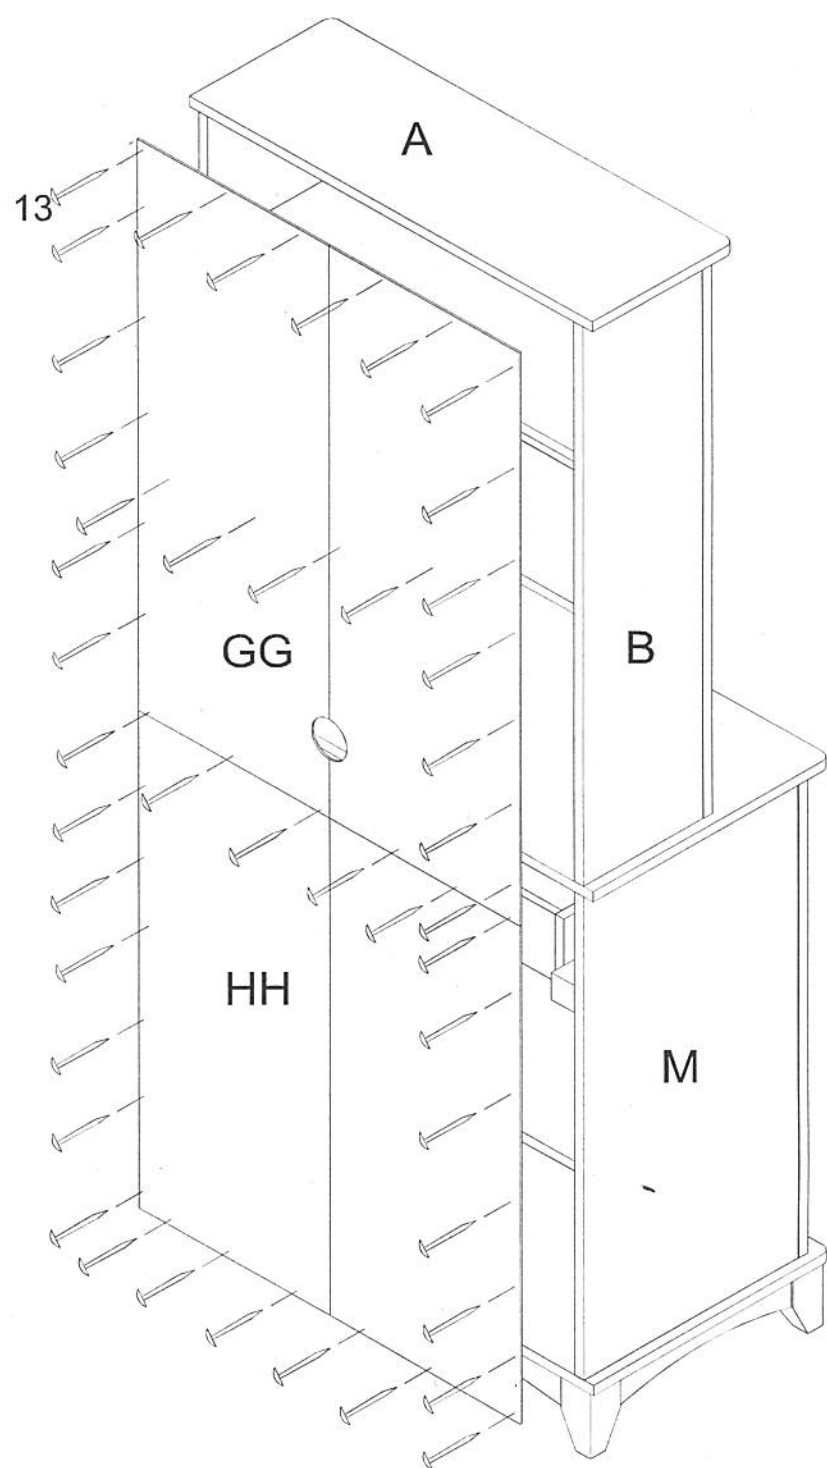

Step 17

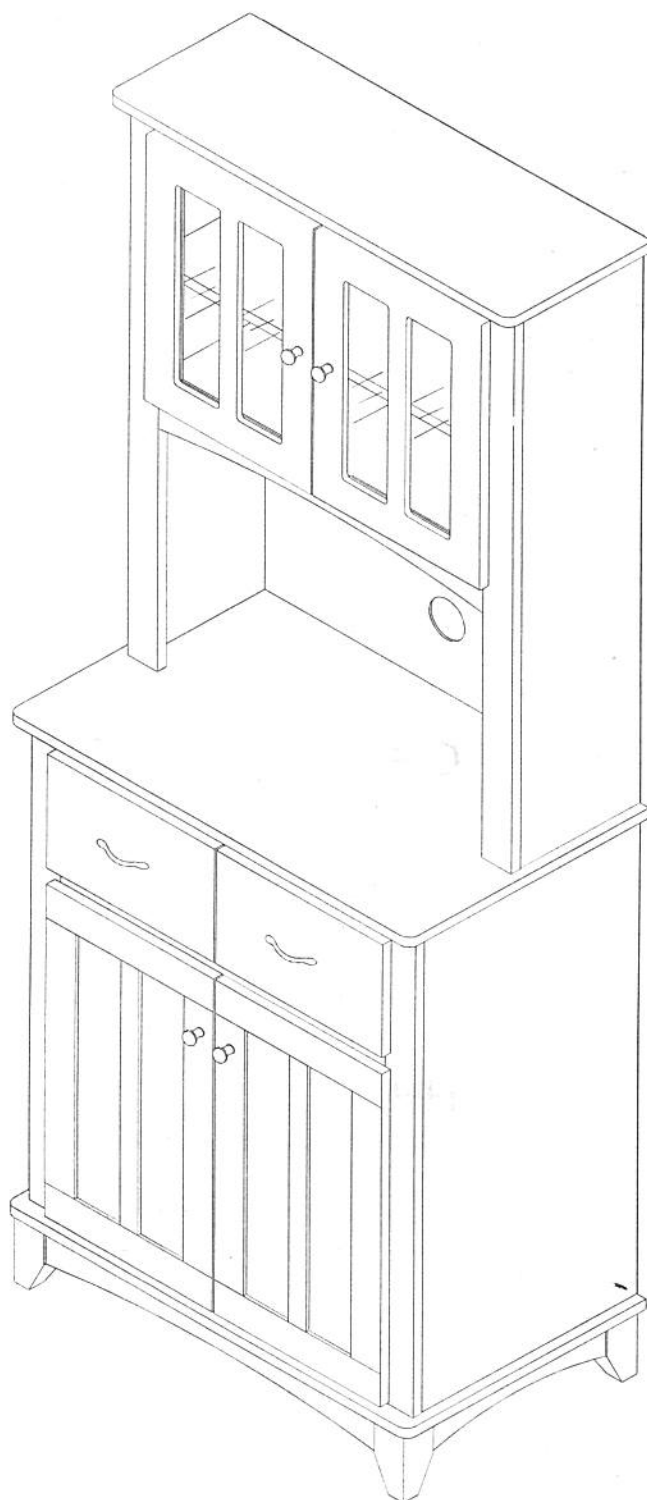

WARNING: ALL SCREWS MUST BE TIGHTENED!

P.12